# WOODLANDER® TRAILER HM136MAX™

 
\*Track Not Included



# **OPERATOR'S MANUAL**

0009013-M-EN: Rev B Publication Date: 28-Mar-2024







# **TABLE OF CONTENTS**

TABLE OF CONTENTS	1
INTRODUCTION	3
GENERAL SAFETY RULES	4
INSPECTION/MAINTENANCE	5
TECHNICAL SPECIFICATIONS	6
BOLT TORQUE SPECIFICATIONS	6
UNPACKING	7
COMPONENT LISTS	8
TO-SCALE HARDWARE	10
BOLTS & SCREWS	10
SCALES	12
WASHERS	13
NUTS	13
SAWMILL COMPONENTS	14
SAWMILL HARDWARE	14
TRAILER ASSEMBLY	15
TOOLS REQUIRED	15
2. GUSSETS	16
3. SIDE PLATES	18
4. FRONT AND REAR CROSS BEAMS	21
5. SIDE PLATE-TO-RAIL OFFSET & BOLT TORQUING	23
6. INNER CROSS BEAMS AND JACK MOUNTS	28
7. AXLE MOUNTS AND AXLE CROSS BEAM	31
8. AXLE	33
9. TONGUE AND COUPLER	35
10. LIGHTING	
11. ADDITIONAL JACK STANDS	41
12. NAMEPLATES	
13. HEAD LOCK-DOWN PLATES	
14. WHEELS	
WHEEL ALIGNMENT ADJUSTMENT	
15. FENDERS	49



16. SAFETY CHAIN	51
17. CANT HOOK LEVERAGE PLATES	52
OPERATION	53
LOCKING-DOWN THE SAWMILL HEAD	53
REPLACEMENT PARTS ORDERING	55
EXPLODED ASSEMBLY VIEWS	56
CHASSIS AND TRACK, SIDE PLATE ALIGNMENT	56
TONGUE	57
NORTH AMERICA	57
EUROPE	57
AXLES, WHEELS, AND FENDERS	58
LIGHTING	59
NORTH AMERICA	59
EUROPE	60
NAMEPLATES	61
SWIVEL JACKS AND RATCHET STRAP	62
PARTS LISTS	63
NORTH AMERICA	63
EUROPE	
NOTES	67



## INTRODUCTION

Congratulations on your purchase and welcome to Woodland Mills! This manual gives you the necessary information about your Woodlander<sup>®</sup> sawmill trailer so you will be able to use it properly. The entire manual must be read and understood before using the trailer. If any questions should arise that are not covered by this manual, please contact Woodland Mills, Inc.

OWNER'S RECORD
Please take a moment to record the following information about your Woodlander® sawmill trailer. If you need to call for assistance, please be ready to provide your model and serial numbers. This information will allow us to help you more quickly when you call.
MODEL NUMBER
SERIAL NUMBER
DATE OF PURCHASE

The Woodlander® sawmill trailer is compatible with HM126, HM130, HM130MAX®, & HM136MAX™ sawmill and track systems for milling logs while the trailer is stationary and firmly supported on the ground. It is not intended to carry any additional weight or be used as a utility trailer.

The Woodlander® sawmill trailer is sold as <u>off-road only</u> trailers designed for certain applications. We strongly recommend the trailer not be modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the trailer until you have first contacted Woodland Mills to determine if it can or should be performed using the product.

For technical questions and replacement parts, please contact Woodland Mills, Inc.



## **GENERAL SAFETY RULES**



## **WARNING!**

Read and understand all instructions. Failure to follow all instructions listed below may result serious injury.



## **WARNING!**

The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product but must be supplied by the operator.



## **WARNING!**

The trailer is not designed to carry any additional weight other than the sawmill and trailer itself while being towed. Failure to heed this warning could result in damage to the trailer and/or the sawmill.

Damage caused by towing additional weight will void the warranty.



# **WARNING!**

The Woodlander® sawmill trailers are designed and sold as off-road trailer packages and are recommended for this type of use. While they include some road safety components, every province, state, and country have unique regulations that need to be met for road-worthiness. It is important to comply with all regional regulations if attempting to convert the trailer for road use.



# INSPECTION/MAINTENANCE

- Check the tires before all trips. Make sure they are inflated to the pressure shown on the tire.
- Grease the axle bearings every 3 months or 1000 miles [1600 km], whichever comes first.
- Check the tow hitch ball coupler. Make sure it is not damaged.
- · Check the wheel lug nuts before all trips. Make sure they are torqued properly.
- Check the lights. Make sure all the lights work properly. Replace any lights that do not work.
- Inspect trailer before all trips for any damaged or loose parts.



# **TECHNICAL SPECIFICATIONS**

Item	Specification
Trailer Axle	Independent Torsion Axle Design
Trailer Wheels	5 Bolts @ 4.5 in [114 mm] & 175/80R13 Approved Tires
Tire Pressure	Refer to Tire
Wheel Nut Torque	80 ft•lb [110 N•m]
Trailer Ball Coupler	2 in [50 mm]
Trailer Lights	LED Light Kit (stop, turn, tail, side markers, and license plate light)
Finish	Powder Coat Paint / Galvanized Steel
Fenders	Removable
Safety	Locking pins and safety straps to secure sawhead while travelling
Shipping Weight	846 lb [384 kg]
Product Weight	782 lb [355 kg]

## **BOLT TORQUE SPECIFICATIONS**

Bolt (Thread Size)	Torque
M5	78 in•lb [9 N•m]
M6	133 in•lb [15 N•m]
M8	333 in•lb [38 N•m]
M10	53 ft•lb [72 N•m]
M12	93 ft•lb [126 N•m]




# **BOLT TORQUE WARNING!**

The torque specifications listed above apply only to the track and trailer assembly outlined in this manual. They do <u>not</u> apply to the sawmill assembly. Follow the instructions in the sawmill operator's manual when assembling the carriage and sawhead.



# **UNPACKING**

Remove all the parts from the steel crate. Set the crate aside as it will be used as a support for several of the assembly steps.

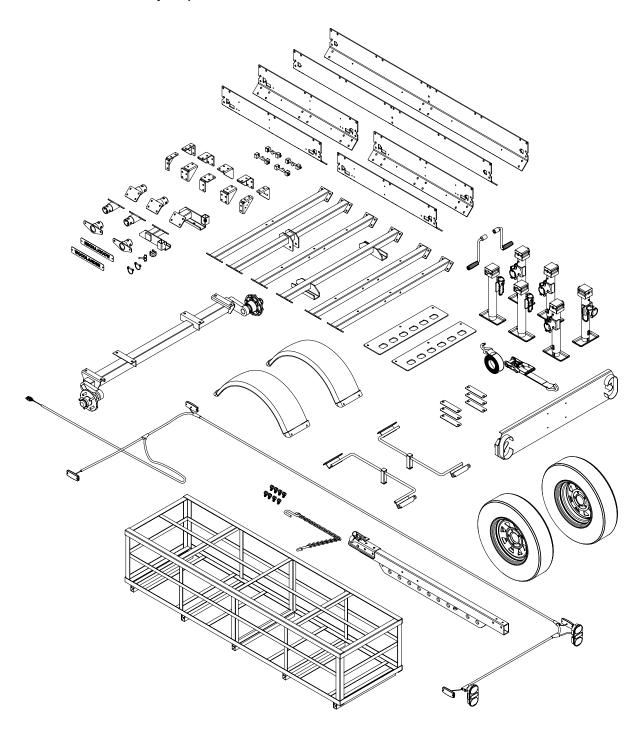



# **COMPONENT LISTS**

Verify all component and hardware quantities are correct prior to assembling the trailer.

4x	End Gusset [0001373]		4x	Jack Mount [0001376]	
6x	Joining Gusset [0001374]		2x	Bushlander Jack Mount [0002249]	
2x	Long Side Plate [0008948]	9	6x	Swivel Jack [0006798]	
4x	Short Side Plate [0008947]	in i	2x	Swivel Jack Handle [0006800]	
3x	Cross Beam [0008942]		4x	Side Plate Alignment Diamond [0008949]	
1x	Front Cross Beam [0003935]		4x	Side Plate Alignment Nut [0008950]	
1x	Tongue Cross Beam [0009650]		4x	Side Plate Alignment Jaw [0008951]	
1x	Axle Cross Beam [0003937]		1x	Axle Assembly	
1x	Left Axle Mount [0009155]		6x	Axle Shim Plate [0001682]	
1x	Right Axle Mount [0009156]		2x	Wheel [175-80R13]	



28-Mar-2024

1x	Tongue [0001371]	1.0000000	2x	Nameplate [0004445]	• WOODLANDER •
1x	Tongue Bracket [0001372]		1x	Hitch Ball Coupler (North America) [0001381]	0000
2x	Knob M10 X 30 mm [0001698]		1x	Ratchet Strap [0005146]	
3x	Round Locking Pin [0004728]		2x	Cant Hook Leverage Plate [0008944]	[00000]
1x	Safety Chain [0001382]		1x	Hitch Ball Coupler (Europe) [0001702]	000
1x	Taillight Bracket [0003938]		1x	Wiring Harness (Europe) [0001676-2]	7
2x	Fender Bracket [0009823]		2x	Reflector Bracket (Europe) [0001379]	
2x	Fender [0004221]		2x	Rear Reflector (Europe) [0001390]	
8x	Cable Clamp [0001396]		4x	Side Reflector (Europe) [0001391]	
1x	Wiring Harness (North America) [0001676-1]	7'	2x	Front Reflector (Europe) [0001392]	



# **TO-SCALE HARDWARE**

**BOLTS & SCREWS** 

Hardware graphics are printed at 1:1 scale for ease of identification. Simply place the hardware over the image in the tables to verify it is the correct size.

12x	HHB-MBE075FCJ	M6 X 1 X 20 mm HEX BOLT
1x	ннв-мвм095FCМ	M10 X 1.5 X 40 mm HEX BOLT
2x	HHB-MBM215PCM	M10 X 1.5 X 160 mm HEX BOLT
2x	HHB-MBR125PCM*	M12 X 1.75 X 70 mm HEX BOLT
2x	HHB-MBR155PCM**	M12 X 1.75 X 100 mm HEX BOLT
8x	FHH-MBJ075FCJ	M8 X 1 X 20 mm FLANGED HEX BOLT



4x	FHH-MBJ080FCJ	M8 X 1 X 25 mm FLANGED HEX BOLT
74	I III I-IVIDOUGUI CU	
116x	FHH-MBM085FCM	M10 X 1.5 X 30 mm FLANGED HEX BOLT
110%		Л
32x	FHH-MBM090PCM	M10 X 1.5 X 35 mm FLANGED HEX BOLT
8x	FHH-MBM095PCM	M10 X 1.5 X 40 mm FLANGED HEX BOLT
10x	FHH-MBM125PCM	M10 X 1.5 X 70 mm FLANGED HEX BOLT
8x	FHH-MBR090PCM	M12 X 1.75 X 35 mm FLANGED HEX BOLT




2x	FHH-MBR135PCM	M12 X 1.75 X 80 mm FLANGED HEX BOLT
4x	SHC-MBM175PTA	M10 X 1.5 X 120 mm SOCKET HEAD CAP SCREW
8x	PPH-MBA075FCE***	M5 X 0.8 X 20 mm PHILLIPS PAN HEAD SCREW

- \* M12 X 1.75 X 70 mm Hex Bolts not applicable on European trailers
- \*\* M12 X 1.75 X 100 mm Hex Bolts not applicable on North American trailers
- \*\*\* M5 X 0.8 X 20 mm Phillips Pan Head Screw quantity 12x on European trailers


#### **SCALES**

Ruler scales are also provided below to double-check bolt and screw lengths when necessary.

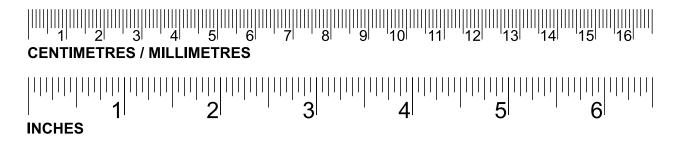





#### **WASHERS**

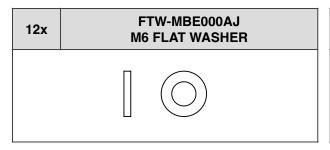



### **NUTS**

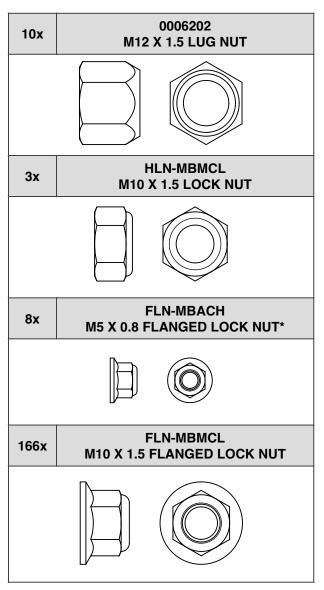

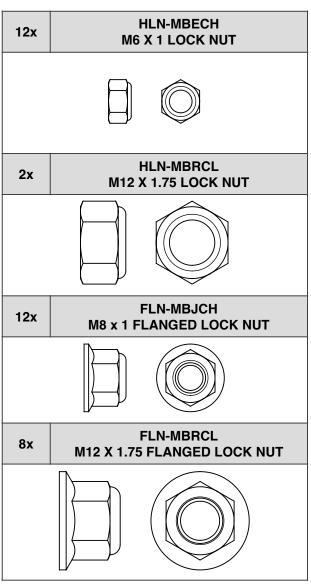

<sup>\*</sup> M5 X 0.8 Flanged Lock Nut quantity 14x on European trailers



## **SAWMILL COMPONENTS**

These components from the sawmill are required to build the trailer. They do not ship with the Woodlander® trailer.

4x	Track Rail [0001073]	
2x	Reinforcement Plate [0001072]	
4x	Carriage Stop [0001055]	
4x	Anti-Tip Rail [0003620]	

3x	T-Bolt M10 X 40 mm [0001059]	
2x	End Bunk [0003606]	
3x	Log Bunk [0009120]	FILE

## SAWMILL HARDWARE

None of the hardware from the sawmill is used to build the trailer.



# **TRAILER ASSEMBLY**

# 1. TOOLS REQUIRED

Tool	Specification
Phillips Head Screwdriver	No. 3
Wrench/Socket	8 mm
Wrench/Socket	9 mm
Wrench/Socket	10 mm
Wrench/Socket	13 mm
Wrench/Socket	14 mm
Wrench/Socket	15 mm
Wrench/Socket	18 mm
Adjustable Wrench	Variable
Torque Wrench	Capable of 93 ft·lb [126 N·m]
Drill	Corded or cordless



### 2. GUSSETS

Using the hardware listed below, assemble the gussets to the track as shown on the next page.

Ensure the track width is set correctly (see track widths on next page), and measure diagonally to check for squareness. Torque all bolts per the table in section, **BOLT TORQUE SPECIFICATIONS**.

24x	M10 X 30 mm Flanged Hex Bolt	2x	Reinforcement Plate	
8x	M10 X 40 mm Flanged Hex Bolt	4x	End Gusset	
32x	M10 Flanged Lock Nut	6x	Joining Gusset	
2x	End Bunk	4x	Track Rail	
Зх	Log Bunk			


Track components listed in these tables are *not* included with the trailer package, namely track rails, reinforcement plates, bunks, and carriage stops. These components are found in the sawmill crate. If the trailer was purchased for an existing sawmill (i.e. the sawmill is currently assembled), the track will need to be disassembled prior to building the trailer and the following assembly instructions performed.




Use the fasteners included with the sawmill trailer to assemble the track. The fasteners included with the sawmill track will *not* be used.





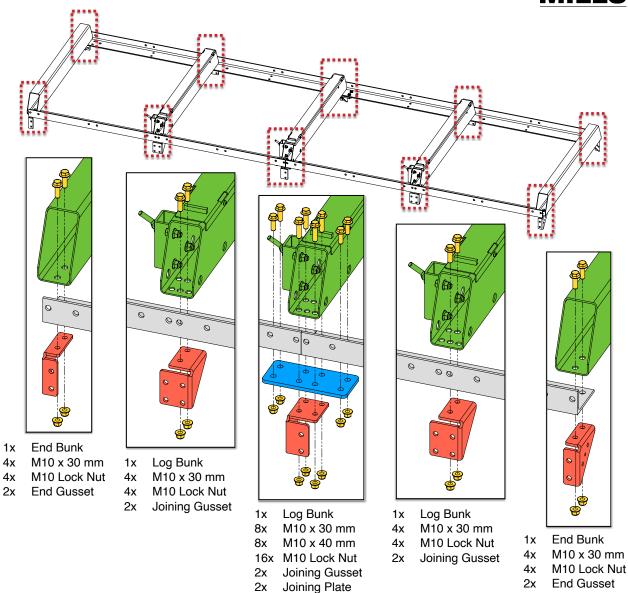


The above steps need to be completed on both left and right sides of the track. Make sure the gussets are flush with the outside face of the track rails as shown below.

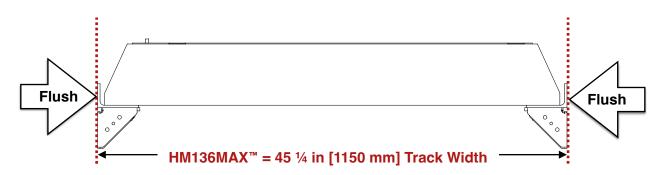



## 3. SIDE PLATES

Using the shipping crate as an assembly aid, lay two (2) 4X4s across the top the crate near each end. Position the track/gusset assembly on the 4X4s, ensuring it is centred end-to-end. The 4X4s need to be long enough to support the track rails but shorter than the track is wide.

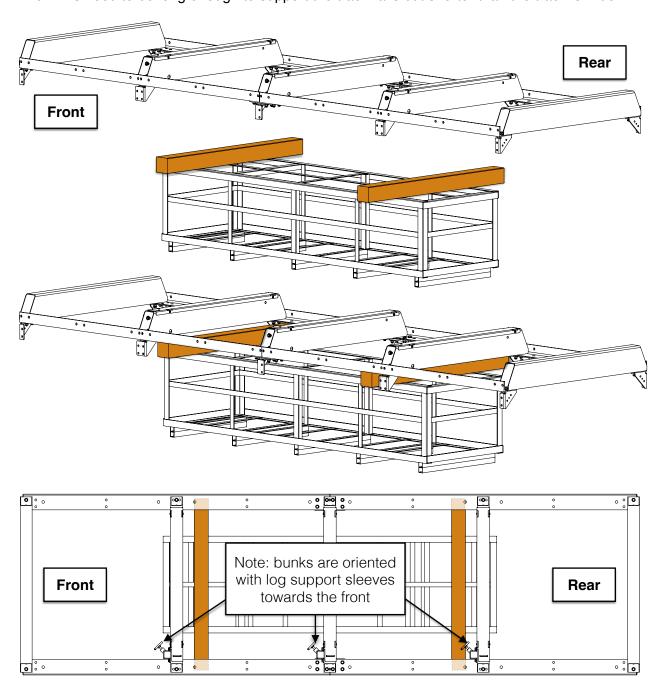


Use 43 in [1092 mm] long 4X4s.





Using the hardware listed below, hang the side plates and the anti-tip rails using the M10 X 30 mm and M10 X 35 mm bolts. The anti-tip rails are from the sawmill crate. Do not tighten these bolts. The eight (8) M10 X 35 mm bolts are used with the carriage stops. The M10 X 30 mm bolts are used everywhere else.


68x	M10 X 30 mm Flanged Hex Bolt	4x	Short Side Plate	
8x	M10 X 35 mm Flanged Hex Bolt	4x	Anti-Tip Rail	
76x	M10 Flanged Lock Nut	4x	Carriage Stop	
2x	Long Side Plate			

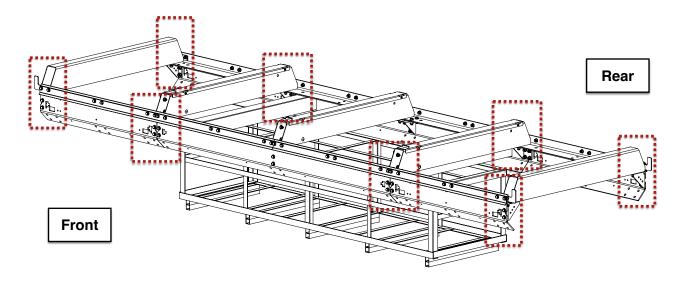



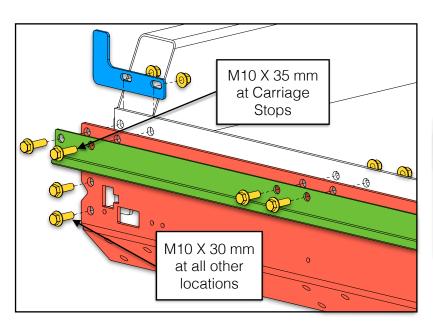

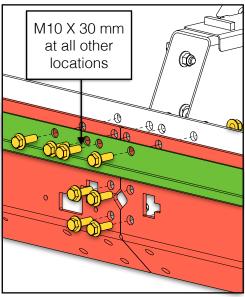

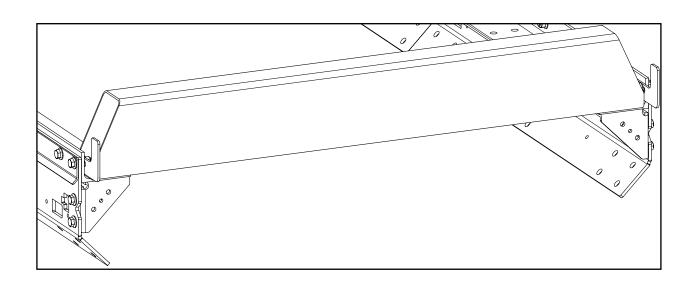





# 4. FRONT AND REAR CROSS BEAMS


Using the hardware listed below, install the front and rear cross beams (2 front, 1 rear). Ensure the cross beam with the two holes is assembled at the front. Do not tighten these bolts.

24x	M10 X 30 mm Flanged Hex Bolt	1x	Front Cross Beam	
24x	M10 Flanged Lock Nut	1x	Tongue Cross Beam	
1x	Cross Beam			

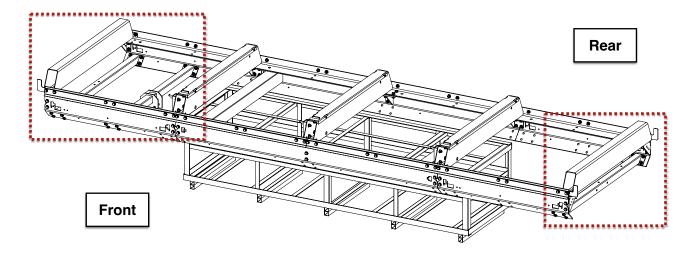



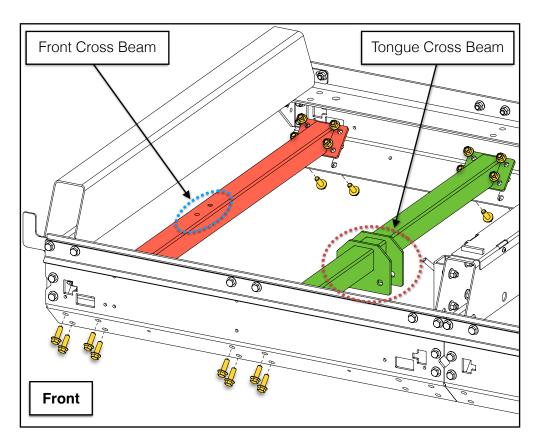

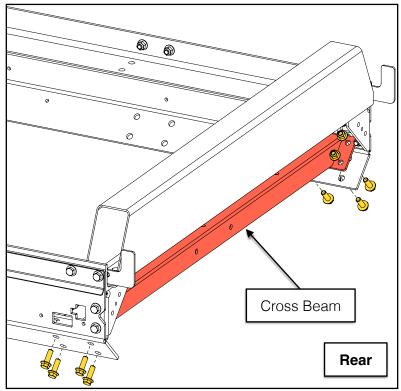




# 5. SIDE PLATE-TO-RAIL OFFSET & BOLT TORQUING


Install the components listed below to assist with correcting any side plate-to-rail offsets and gaps.

4x	M10 X 120 mm Socket Head Cap Screw	4	4x	Side Plate Alignment Jaw	
4x	Side Plate Alignment Diamond		4x	Swivel Jack	
4x	Side Plate Alignment Nut	- 1	1x 2x]	Swivel Jack Handle	

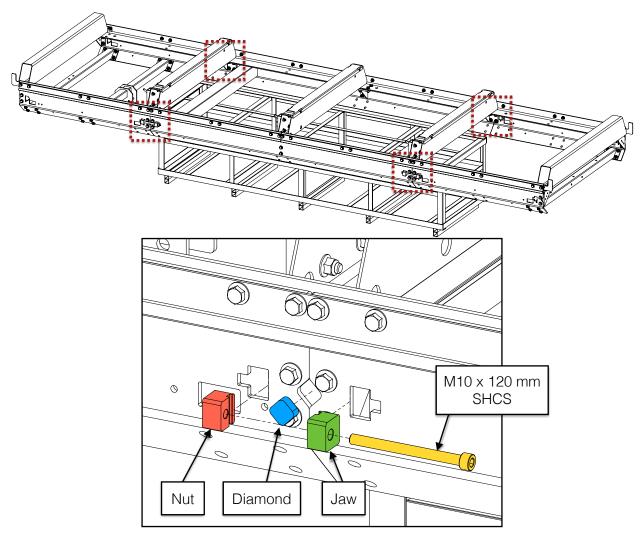




Before torquing the chassis bolts as shown on the following 3 pages, verify there is a  $\frac{3}{10}$  in [10-13 mm] offset between the top of the track rails and the top of the side plates. The offset must be uniform along the entire length of the trailer on both sides.

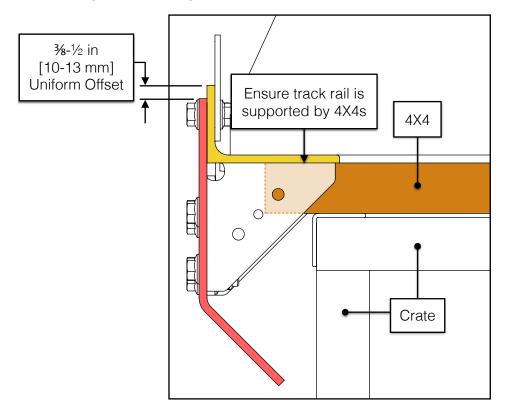


If the offset is not uniform, ensure the track is sitting on the 4X4s and not the crate. The side plates need to hang from the rails unobstructed, with only the force of gravity pulling them down.



Ensuring the side plate-to-rail offset is uniform, tighten and torque *only* the four (4) highlighted bolts securing the long side plate. Do this for both sides of the trailer.

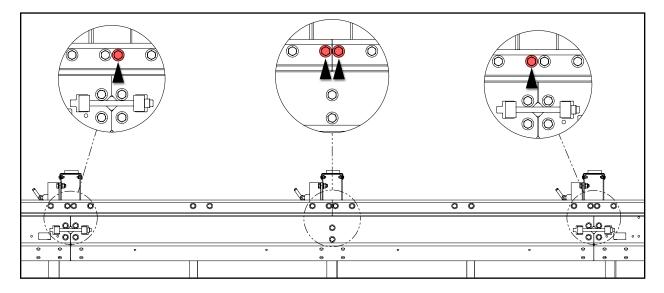


With the long side plate secured in place, note the gaps (if any) between the short side plates and the long side plates.

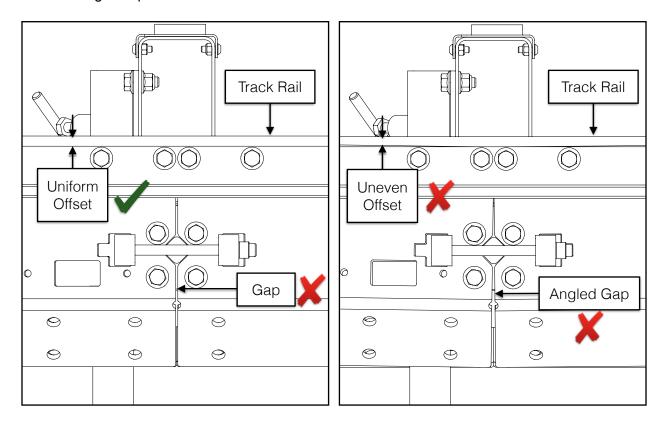


If there are gaps, they can be closed by tightening the M10 X 120 mm Socket Head Cap Screw. Tighten all four (4) M10 X 120 mm Socket Head Cap Screws to close the gaps.



Remember to maintain a uniform offset between the top of the track rails and the top of the side plates when tightening the alignment hardware.

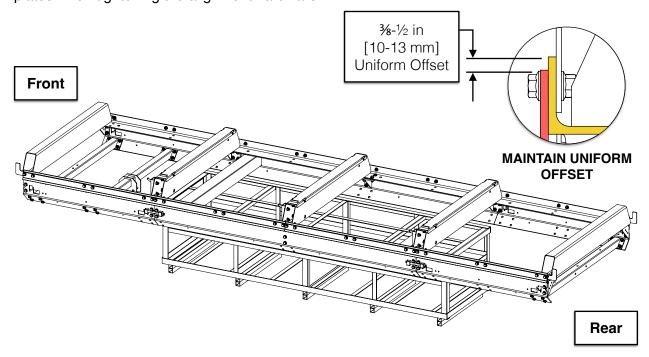


While maintaining a uniform side plate-to-rail offset, torque the remaining bolts per the table in section, **BOLT TORQUE SPECIFICATIONS**, starting from the centre and working towards the outer ends. Ensure the track is straight, level, and square during this procedure.

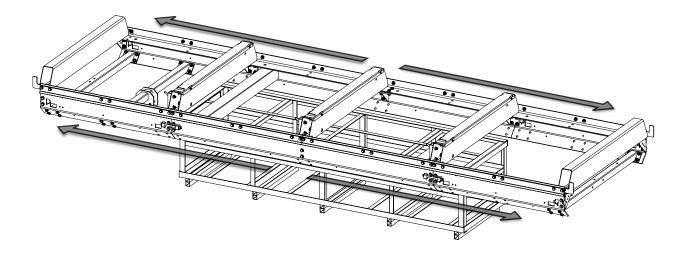



Position the swivel jack receivers under the front and rear *cross beams* as shown below and raise the assembly until the side plates are above the crate. Discard the two (2) 4X4s.

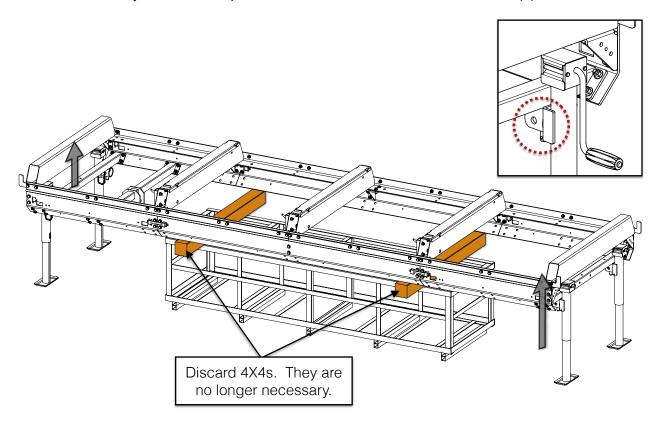





## 6. INNER CROSS BEAMS AND JACK MOUNTS

Using the hardware listed below, install the 2 remaining cross beams and 4 jack mounts. Torque all the bolts per the table in section *BOLT TORQUE SPECIFICATIONS*.

16x	M10 X 35 mm Flanged Hex Bolt	2x	Cross Beam	
16x	M10 Flanged Lock Nut	4x	Jack Mount	

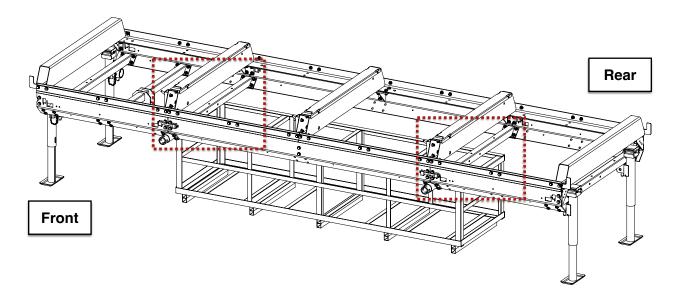




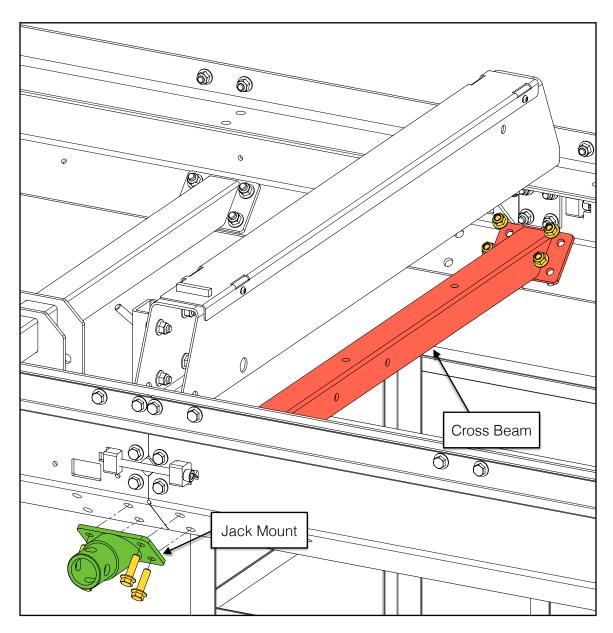




Next, lower the trailer until the cross beams are resting on the crate.

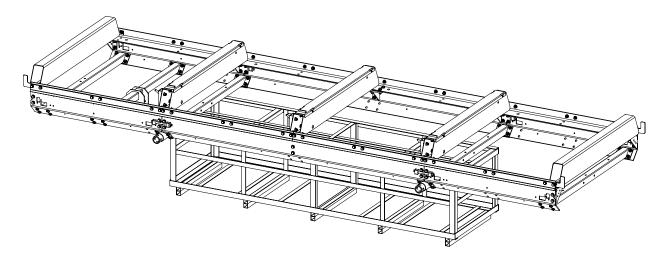

Slide the swivel jacks onto the jack mounts and secure them with the locking pins. Raise the jacks up to slide the crate out from under the trailer assembly. Place blocks of wood underneath each jack if necessary to achieve the required clearance.

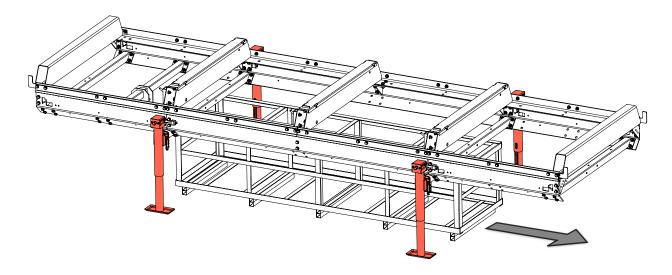





# 7. AXLE MOUNTS AND AXLE CROSS BEAM

Using the hardware listed below, install the axle mount cross beam and left/right axle mounts with fender adapter as shown. Tighten these bolts.

8x	M10 X 35 mm Flanged Hex Bolt	1x	Axle Mount w/ Fender Adapter [Left]	
8x	M10 Flanged Lock Nut	1x	Axle Mount w/ Fender Adapter [Right]	
2x	M10 X 30 mm Knob	1x	Axle Mount Cross Beam	

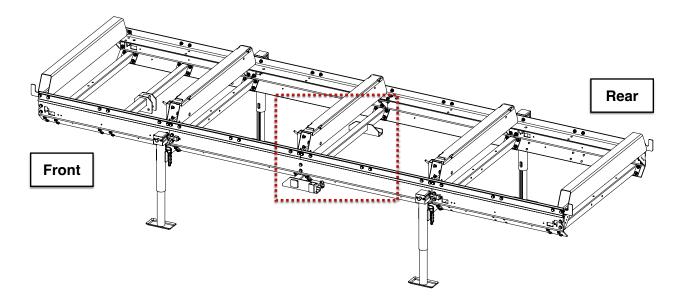



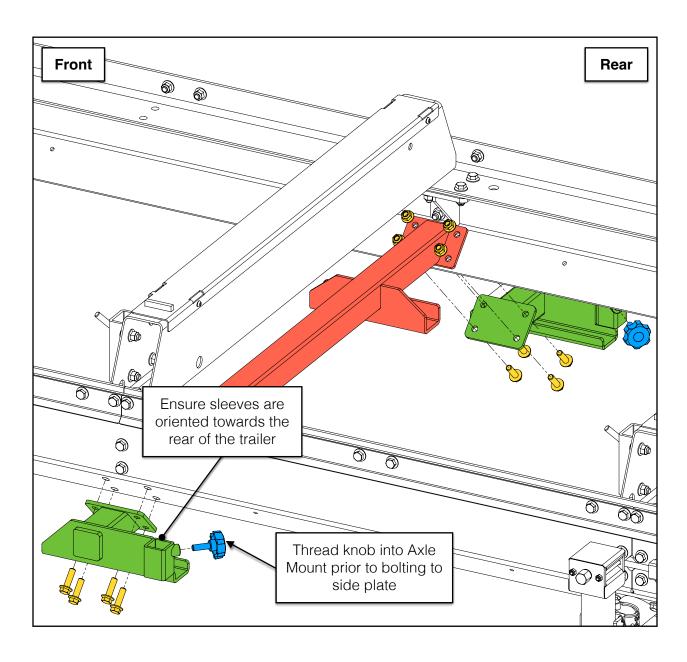




## 8. AXLE


Using the hardware listed below, install the axle as shown on the next page. Do not torque these bolts until instructed in step, *WHEELS*.

8x	M12 X 35 mm Flanged Hex Bolt	1x	Axle	<b>37.52</b>
8x	M12 Flanged Lock Nut	[6x]	Axle Shim Plate	

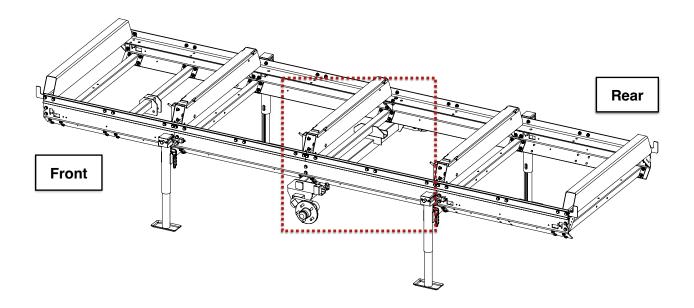



Check for gaps between the axle and fender bracket mounts and axle cross beam. If there are any gaps, use axle shim plates fill the gaps to prevent any flexing of the axle. The shims are not necessary if there are no gaps.

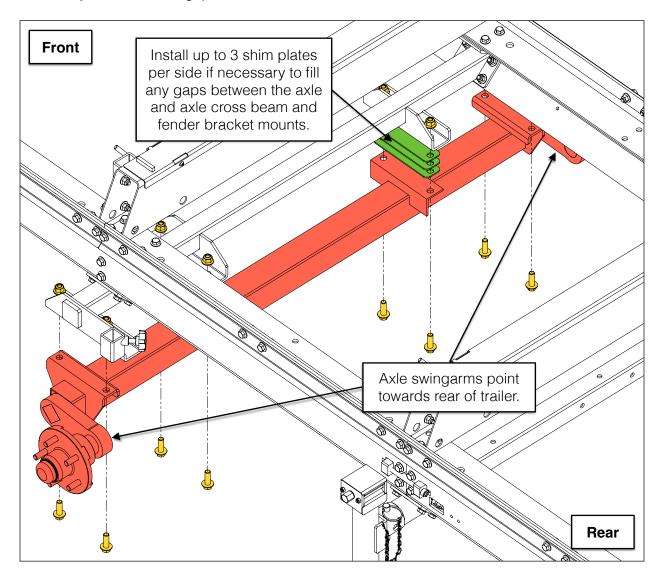





# 9. TONGUE AND COUPLER

Using the hardware listed below, install the trailer tongue and hitch coupler. Tighten these bolts.

2x	M12 X 100 mm Hex Bolt (Europe Only)		2x	M12 X 80 mm Flanged Hex Bolt	
2x	M12 X 70 mm Hex Bolt (North America)		2x	M12 Flanged Lock Nut	
2x	M12 Lock Nut		1x	Tongue	1.00000000
2x	M10 X 160 mm Hex Bolt		1x	Hitch Coupler	0000
2x	M10 Flat Washer			Tongue Bracket	
2x	M10 Lock Nut		1x	Locking Pin	



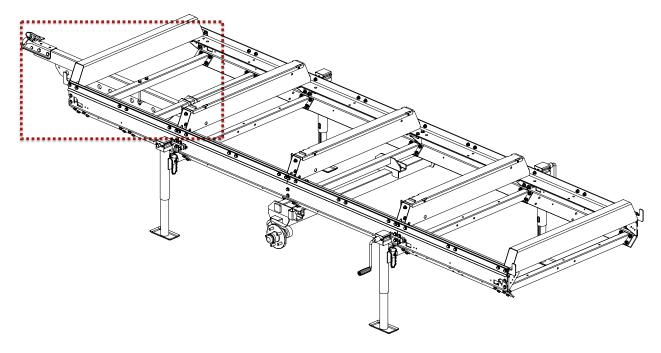

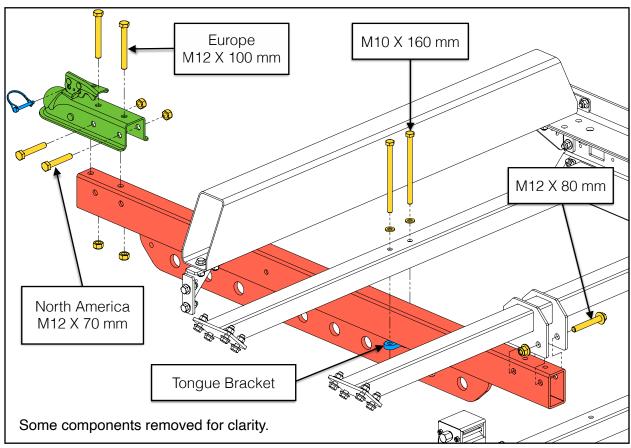




## 10. LIGHTING

Using the hardware listed below, install the taillight bracket and country appropriate wire harness. Use cable clamps to secure wire harness to side plates down right-side of trailer. Tighten all bolts.


On the European (**EU**) version, install the 4 side reflectors, 2 front reflectors, and 2 rear reflector brackets and reflectors as shown on the following pages. There are no red/amber side lights on the European wire harness like the ones included with the North American (**NA**) version.

4x	M8 X 25 mm Flanged Hex Bolt	1x	Taillight Bracket	
4x	M8 Flanged Lock Nut	2x	Rear Reflector Bracket (EU Only)	
8x	M6 X 20 mm Hex Bolt	2x	Rear Reflector (EU Only)	
8x	M6 Flat Washer	4x	Side Reflector (EU Only)	
8x	M6 Lock Nut	2x	Front Reflector (EU Only)	
12x	M5 X 20 mm Pan Head Screw (8x NA Only)	8x	Cable Clamp	
14x	M5 Flanged Lock Nut (8x NA Only)	1x	Wire Harness (NA Only)	
		1x	Wire Harness (EU Only)	7'



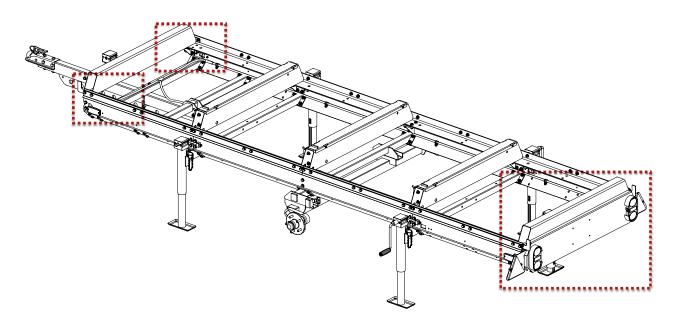


Secure tail lights to the taillight bracket using M5 flanged lock nuts before mounting taillight bracket to trailer.

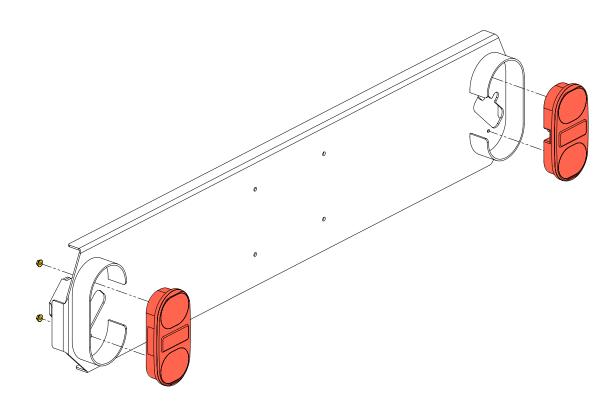


\*\*Note: Tail lights (North America and Europe) and side lights (North America only) are integral to the wire harness. They are shown exploded for assembly clarity.\*\*



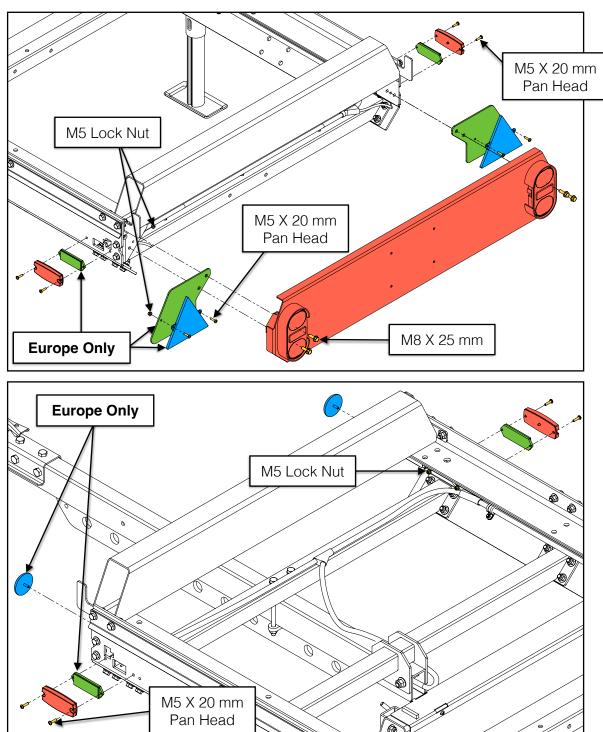

There are 2 cable clamps per short side plate (2) and 4 per long side plate (1) for a total of 8. Cable clamps are installed down the right-hand side of the trailer only (locations circled blue). Use the M6 X 20 mm hex bolts, M6 washers, and M6 lock nuts as shown. This applies to both North American and European models. The wire harness routing is shown below, highlighted red. The excess wire harness should be cable tied to the cross beams, highlighted green.



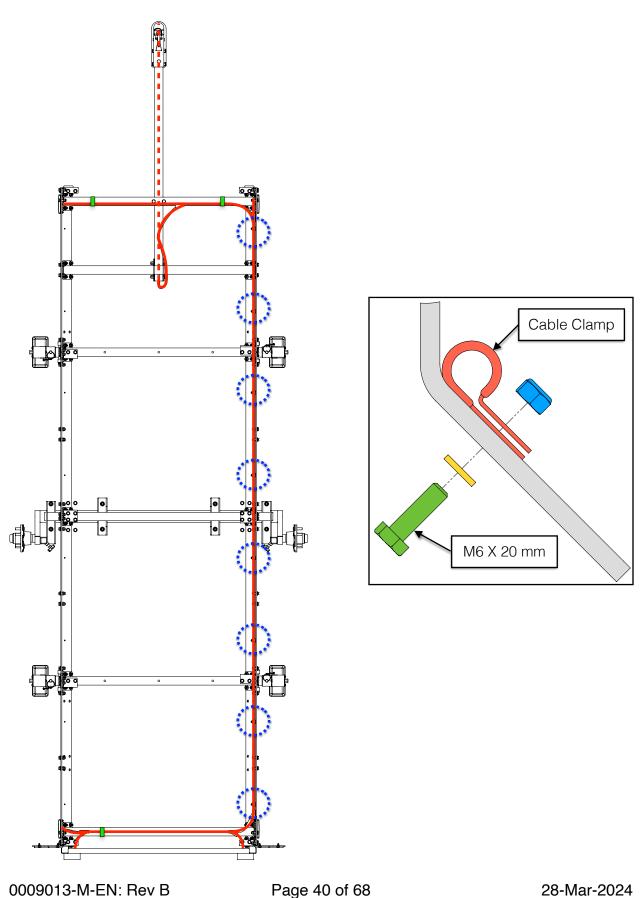





# 11. ADDITIONAL JACK STANDS

Using the hardware listed below, install the two (2) jack mounts and swivel jacks. Tighten these bolts.

4x	M10 X 70 mm Flanged Hex Bolt	2x	Jack Mount	
4x	M10 Flanged Lock Nut	2x	Swivel Jack	

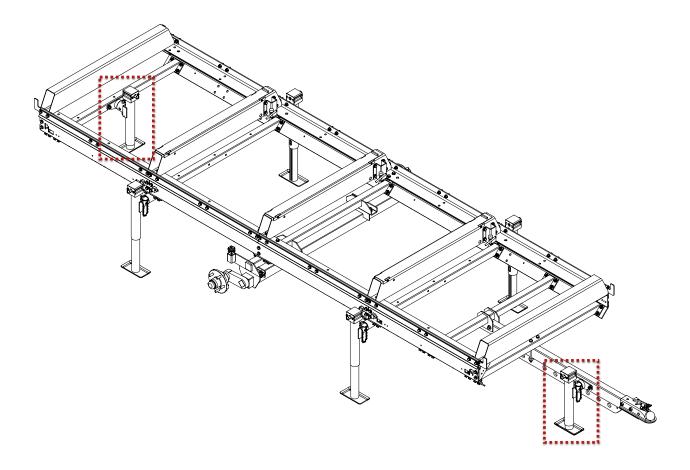



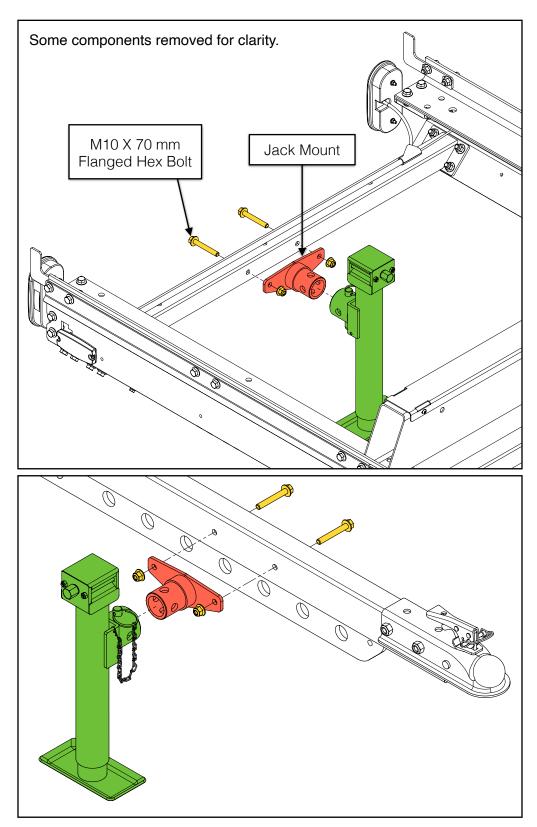





# 12. NAMEPLATES


Using the hardware listed below, install the two (2) Woodlander nameplates as shown.

4x	M6 X 20 mm Hex Bolt	2x	Woodlander Nameplate	• WOODLANDER •
4x	M6 Flat Washer	4x	M6 Lock Nut	

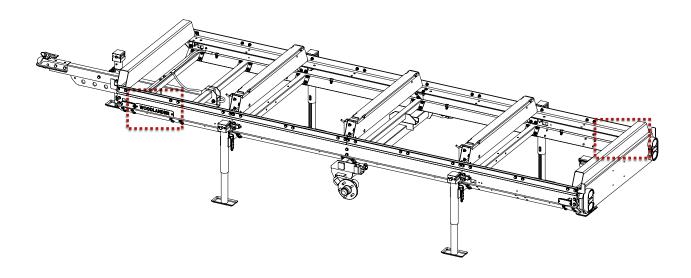



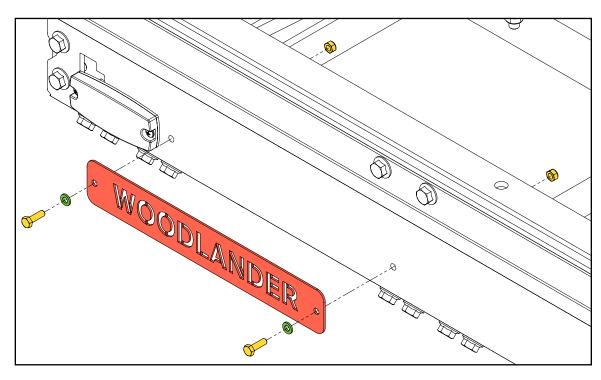

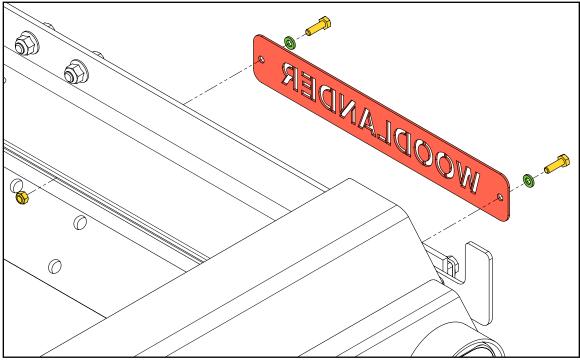






## 13. HEAD LOCK-DOWN PLATES

Place the assembled sawhead on the trailer.

Drill four (4) holes for the lock-down plates using the 10 mm [¾ in] drill bit provided with the Sawmill. Measure between 59 and 63 in [1498 and 1600 mm] from the rear edge of the track rail (*not* the carriage stop) to the rear post of the sawhead. Insert a locking pin into each hole as they are drilled. Secure each locking pin with a linch pin.

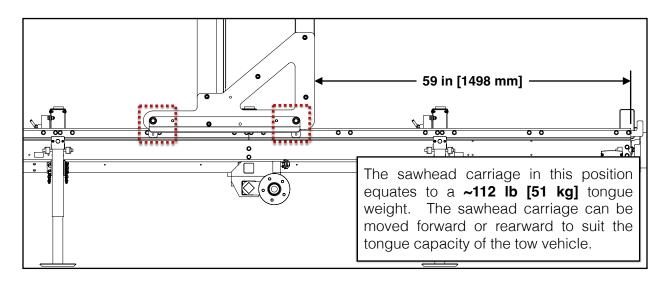

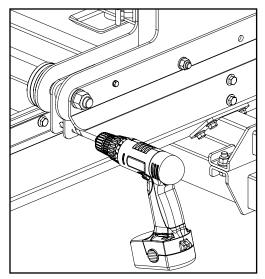

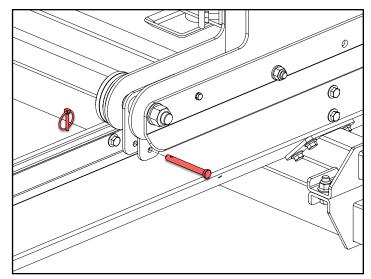



## **WARNING!**

Use cutting oil when drilling holes for lock-down brackets or else the heat generated could ruin the drill bit and produce a rough surface finish.





#### SAWHEAD CARRIAGE LOCK-DOWN POSITIONS


When deciding where to position the sawhead carriage, it is important to consider the tongue weight capacity of the tow vehicle. Lighter tongue weights are better suited for ATVs and smaller vehicles while heavier tongue weights work well with larger vehicles like pickup trucks.

\*\*Note: Tolerance on tongue weights is approx. ±15 lb [±7 kg] depending on how many accessories are installed (Lap Siding, Power Head, Log Loading Ramp Kit, Toolbox, Cant Hook, etc.)\*\*

Tongue Weight "TW" (lb) vs. Carriage Position Dim "X" (in)						
TW	122 lb*	162 lb	205 lb	246 lb	290 lb	
Dim X	60 in*	66 in	72 in	78 in	84 in	

Tongue Weight "TW" (kg) vs. Carriage Position Dim "X" (cm)						
TW	55 kg*	74 kg	93 kg	112 kg	132 kg	
Dim X	152 cm*	168 cm	183 cm	198 cm	213 cm	

<sup>\*</sup>Sawhead carriage centre of mass positioned over axles (highlighted yellow)

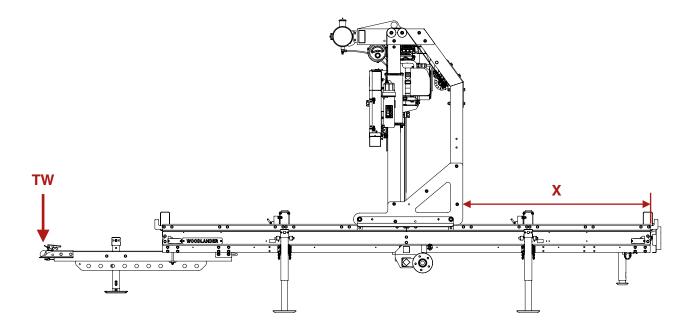




## **14. WHEELS**

Using the hardware listed below, install the tires on the axles. Using a torque wrench, torque the lug nuts to 80 ft•lb / 110 N•m following the pattern shown below.


10x	1/2-20 Lug Nut		2x	175/80R13 Wheel	
-----	----------------	--	----	--------------------	--

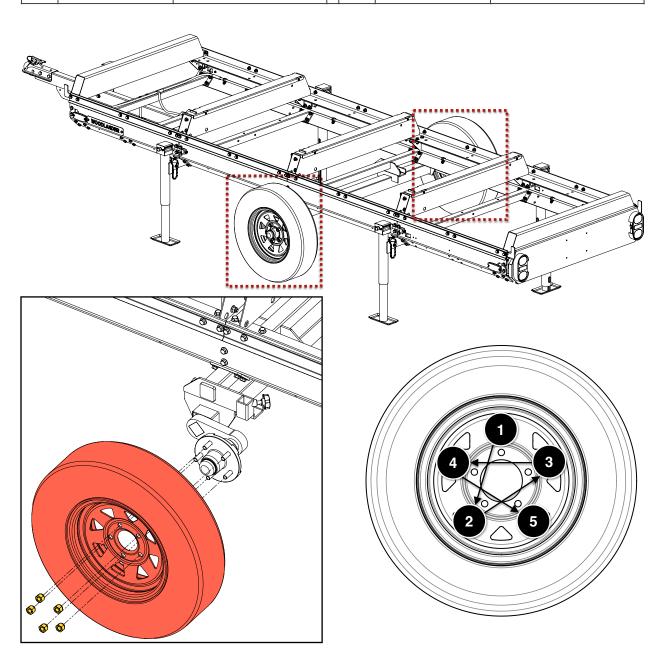



#### WHEEL ALIGNMENT ADJUSTMENT

With the wheels installed, observe their alignment to the side plates. If the wheels are not parallel to the side plates, the axle position needs to be adjusted before the trailer can be towed behind a vehicle.

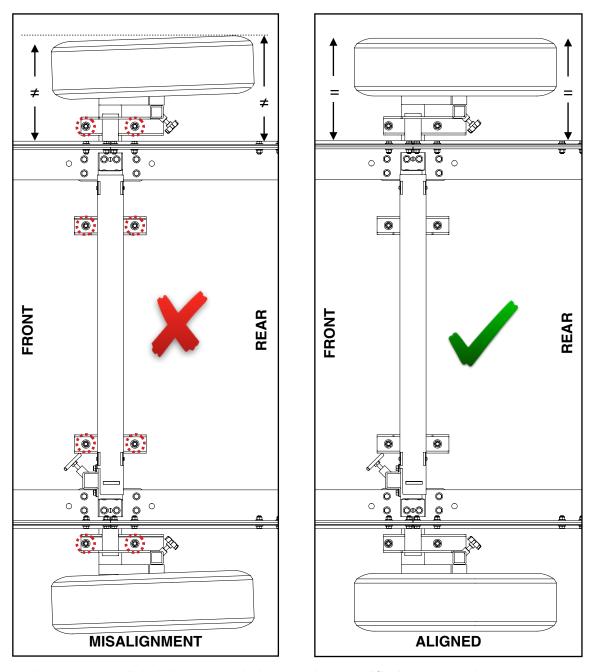


If the wheels are parallel, tighten the axle bolts to the **specified torque** and proceed to the next section. However, if the wheels are *not* parallel, loosen the four (4) M12 bolts on the affected axle(s). Rotate the axle assembly and wheel until the wheels are parallel. Then tighten the axle bolts to the **specified torque**.



## 15. FENDERS


Using the hardware listed below, assemble the fenders to the fender brackets.

8x	M8 X 20 mm Flanged Hex Bolt	2x	Fender Bracket	
8x	M8 Flanged Lock Nut	2x	Fender	
		2x	Locking Pin	

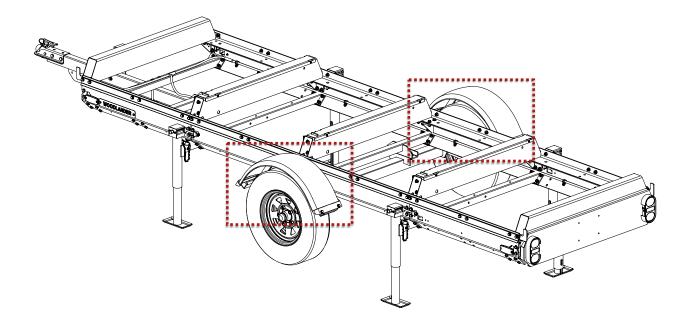




Fasten a metal fender to each fender bracket using four (4) M8 X 20 mm bolts and four (4) M8 flanged lock nuts. Fully tighten these bolts.

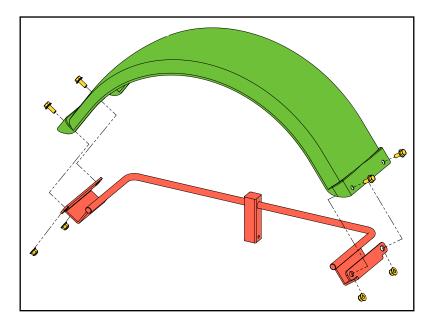

Slide the post on the fender bracket into the sleeve on the axle mount and insert the locking pin through the hole located at the bottom of the fender bracket post. Secure the fender/fender bracket sub-assembly using the M10 X 30 mm knob by threading it into the axle mount until tight.

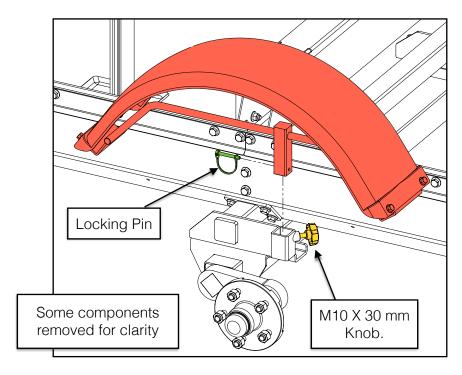




# **16. SAFETY CHAIN**

Using the hardware below, install the safety chain on the trailer tongue.

1x	M10 X 40 mm Hex Bolt	1x	Safety Chain	
2x	M10 Flat Washer			
1x	M10 Lock Nut			

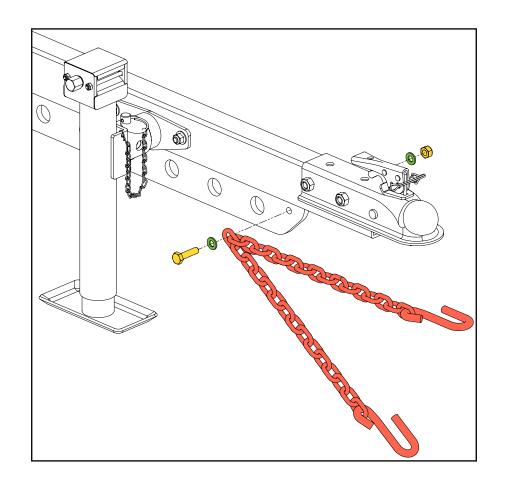



## 17. CANT HOOK LEVERAGE PLATES


Using the hardware below, install the cant hook leverage plates on the cross beams.

Using	the nardware bei	ow, install the cant hook	ievera	ge plates on the c	ross beams.
6x	M10 X 70 mm Flanged Hex Bolt		2x	Cant Hook Leverage Plate	[000000]
6x	M10 Flanged Lock Nut				




# OPERATION LOCKING-DOWN THE SAWMILL HEAD

When transporting the trailer, it is imperative that the sawmill head is locked-down securely to the trailer. Start by inserting the four (4) locking pins through the lock-down brackets and secure them with linch pins.

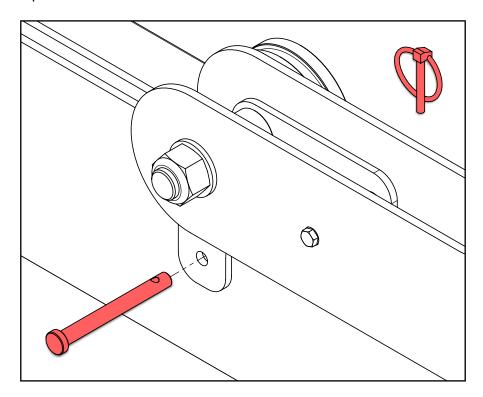


Next, route the included ratchet strap (shown below) around the sawmill and trailer to fully lock-down the sawmill head as shown on the next page.

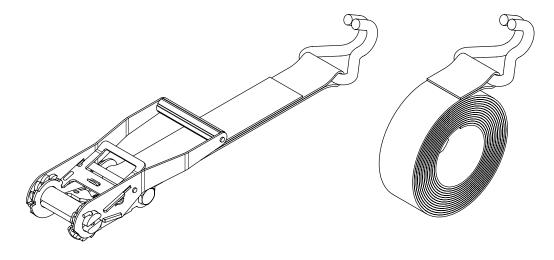




Lower the sawhead to its lowest position. Then insert the short strap hook into the cross beam lifting eye on one side of the sawmill, route the long strap down and under the bottom of the trailer, then up to the opposite lifting eye. Ratchet the strap tight until there is no slack.

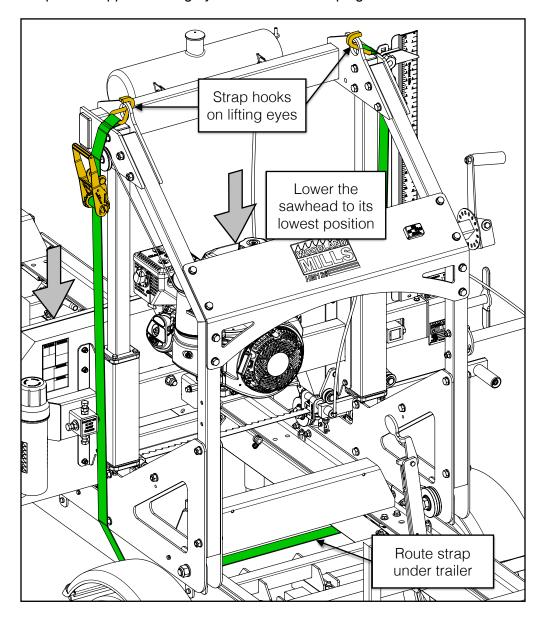



## REPLACEMENT PARTS ORDERING

When ordering replacement parts, first locate the balloon number(s) from the appropriate *exploded assembly view* as shown in the example below:

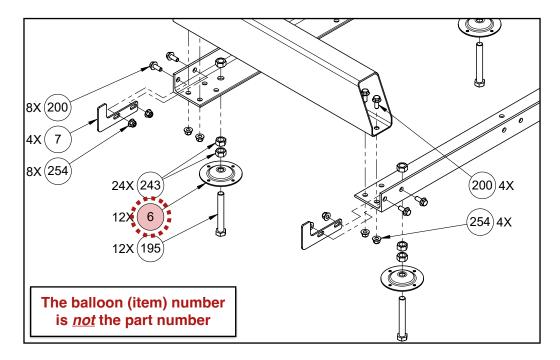

Next, turn to the *Parts Lists* section and locate the balloon number in the "Item" column:


P	PARTS LIST						
		Qua	ntity				
Ite	em	14 hp	9.5 hp	Part No.	Description		
		4	4	0001073	TRACK RAIL, 58.5 mm TALL		
	2	2	2	0001075	LOG BUNK, END		
<b>[</b> ;	•	2	2	0001080	LOG BUNK, MID		
	4	1	1	0001084	LOG BUNK, CENTER		
1		2	2	0001072	REINFORCEMENT PLATE, 90 X 200 mm		
	6	-12	12	0001071	LEVELLING FOOT BASE		
	7	4	4	0001055	CARRIAGE STOP		
- 1	8	1	1	0001062	LOG CLAMP SHAFT AND BRACKET WELDMENT		

Record the part number (e.g. 0001071, HHB-MBM080FCJ, etc.) in the "Part No." column.

Contact Woodland Mills through the website or via phone/email. If possible, include the invoice or sales number from the purchased product so an associated account can be located. If the account has multiple addresses on file, please indicate to which address the replacement part(s) will be shipped.




# **EXPLODED ASSEMBLY VIEWS**CHASSIS AND TRACK, SIDE PLATE ALIGNMENT

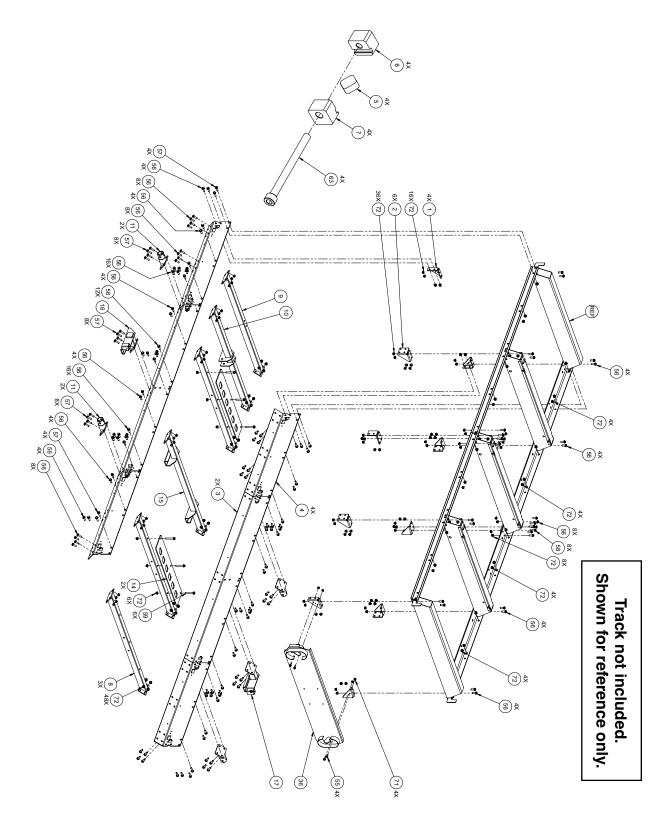




# **TONGUE**

## NORTH AMERICA

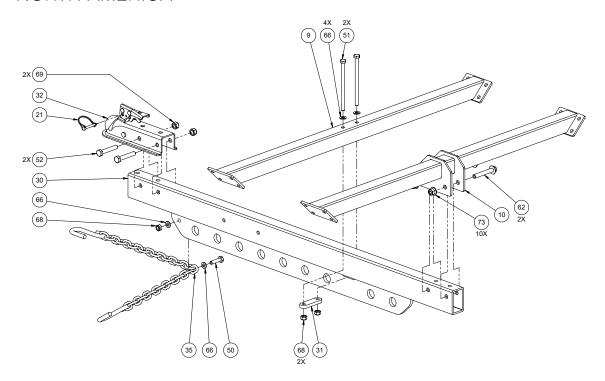


## **EUROPE**

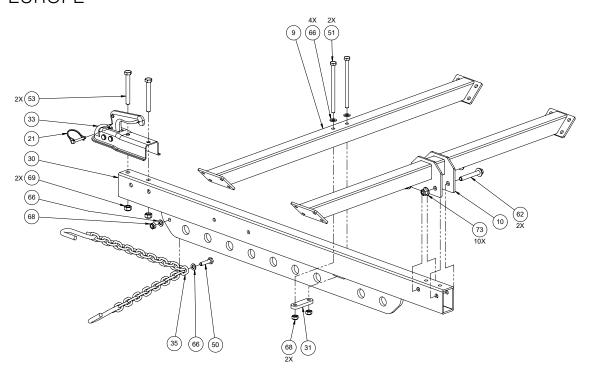




28-Mar-2024

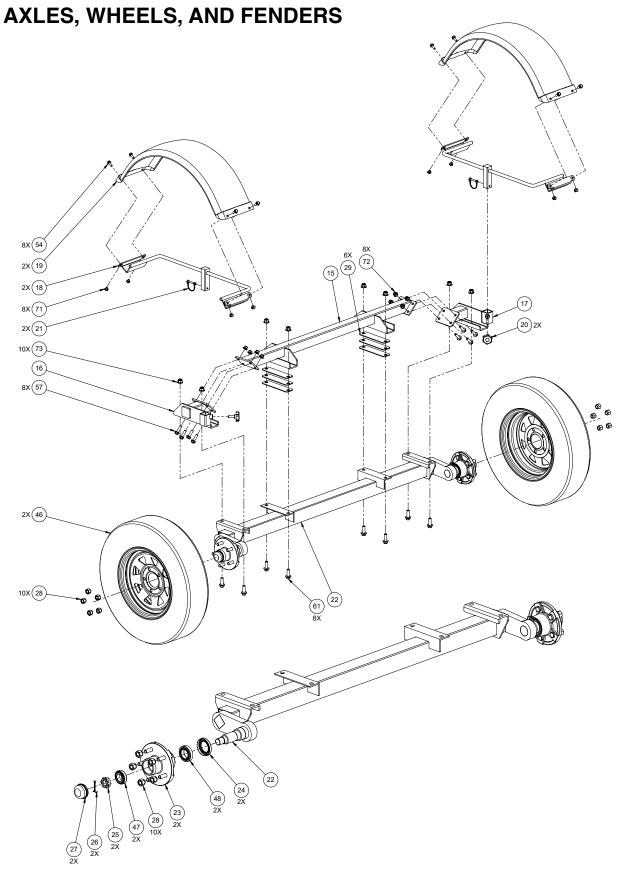




# **LIGHTING**

## NORTH AMERICA

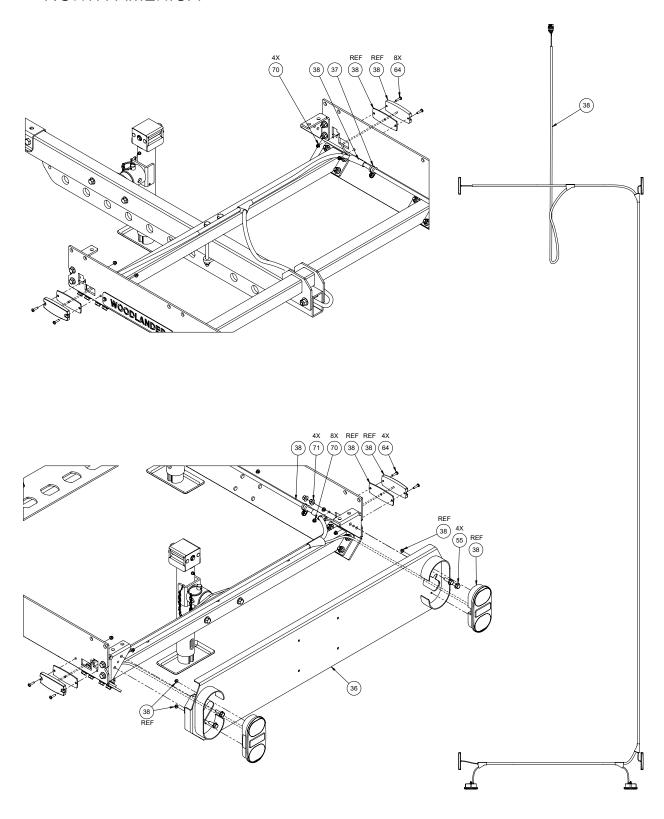




## **EUROPE**

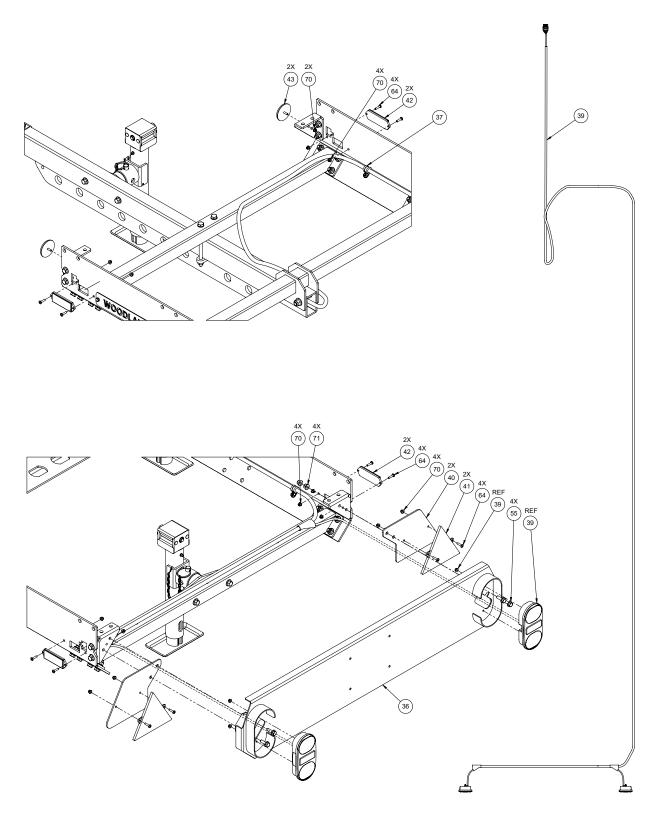




## **NAMEPLATES**

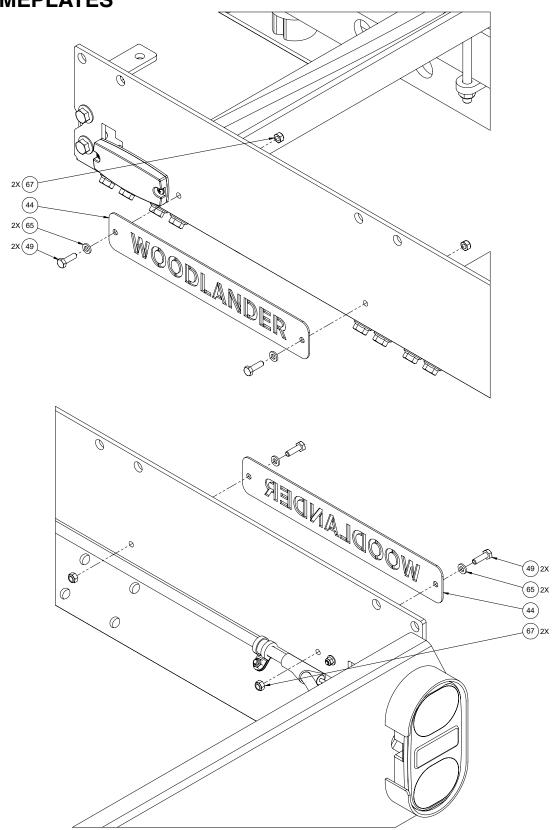



## **SWIVEL JACKS AND RATCHET STRAP**

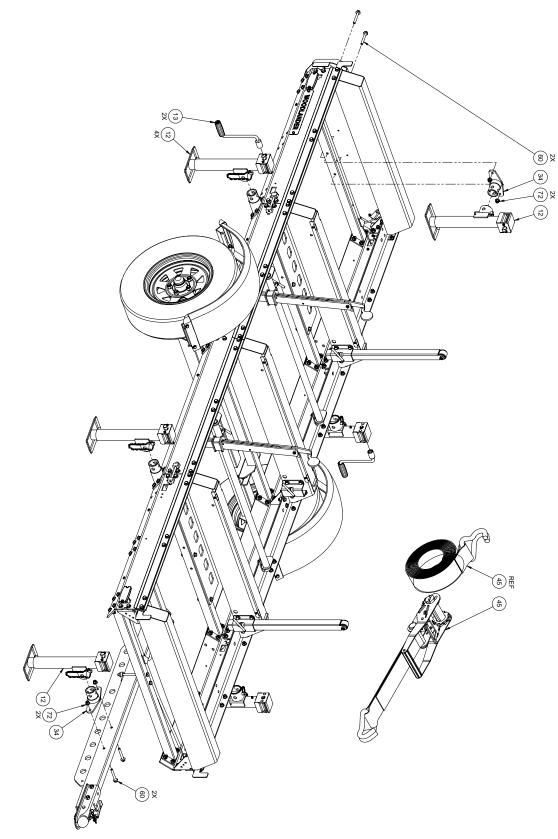



# PARTS LISTS NORTH AMERICA

Item	Quantity	Part No.	Description
1	4	0001373	GUSSET, END
2	6	0001374	GUSSET, JOINING
3	2	0008948	SIDE PLATE, LONG
4	4	0008947	SIDE PLATE, SHORT
5	4	0008949	SIDE PLATE ALIGNMENT DIAMOND
6	4	0008950	SIDE PLATE ALIGNMENT NUT
7	4	0008951	SIDE PLATE ALIGNMENT JAW
8	3	0008942	CROSS BEAM
9	1	0003935	CROSS BEAM, FRONT
10	1	0009650	CROSS BEAM, TONGUE
11	4	0001376	JACK MOUNT
12	6	0006798	SWIVEL JACK, PIPE MOUNT, SIDEWIND SOCKET RECEIVER
13	2	0006800	CRANK HANDLE, SOCKET DRIVE, 3/4 in [19 mm], SWIVEL JACK
14	2	0008944	CANT HOOK LEVERAGE PLATE
15	1	0003937	CROSS BEAM, AXLE
16	1	0009155	AXLE MOUNT W/ FENDER ADAPTER, LEFT
17	1	0009156	AXLE MOUNT W/ FENDER ADAPTER, RIGHT
18	2	0009823	BRACKET, METAL FENDER, 175-80R13 WHEEL
19	2	0004221	METAL FENDER, 175-80R13 WHEEL
20	2	0001698	KNOB, MULTI-LOBE, 48 mm OD, M10 X 1.5, 30 mm LG
21	3	0004728	LOCKING PIN, ROUND, 1/4 in DIA, 1-3/8 in USABLE LG, 2 in LG
22	1	0009652	AXLE, COMBINED, 3500 lb
23	2	0004165	WHEEL HUB, 1/2-20 LUGS
24	2	0009010	ROTARY SHAFT SEAL, SPRING-LOADED, WIPER LIP, 43.5 mm SHAFT, 65 mm OD
25	2	0006092	LOCK NUT, SLOTTED, M24 X 1.5, 16 mm THK
26	2	0004753	COTTER PIN, 5/32 in DIA, 1-1/2 in LG
27	2	0001552	WHEEL HUB DUST COVER, 5-BOLT, 1/2-20 LUGS
28	10	0006201	LUG NUT, 1/2-20
29	6	0001682	AXLE SHIM PLATE, 3 mm THK
30	1	0001371	TONGUE
31	1	0001372	TONGUE BRACKET
32	1	0001381	HITCH BALL COUPLER, 2 in [50.8 mm] BALL, NORTH AMERICA
34	2	0002249	JACK MOUNT
35	1	0001382	SAFETY CHAIN
36	1	0003938	TAILLIGHT BRACKET
37	8	0001396	CABLE CLAMP, 1/2 in ID, 1-3/4 in LG
38	1	0001676-1	LIGHTING WIRING HARNESS, WOODLANDER, NA
44	2	0004445	WOODLANDER NAMEPLATE
45	1	0005146	RATCHET STRAP, 50 mm WD, 4500 mm LG
46	2	175-80R13 Wheel	WHEEL, 175/80R13
47	2	L44649	ROLLER BEARING, TAPERED, 1-1/16 in SFT, 1-3/64 in HSG, .56 in WD
48	2	L68149	ROLLER BEARING, TAPERED, 1-3/8 in SFT, 2-21/64 in HSG, 5/8 in WD
49	12	HHB-MBE075FCJ	HEX HEAD BOLT, CLS 8.8, M6 X 1, 20 mm LG, FULL
50	1	HHB-MBM095FCM	HEX HEAD BOLT, CLS 10.9, M10 X 1.5, 40 mm LG, FULL



Item	Quantity	Part No.	Description			
51	2	HHB-MBM215PCJ	HEX HEAD BOLT, CLS 8.8, M10 X 1.5, 160 mm LG, 26 mm LG THD			
52	2	HHB-MBR125PCM	HEX HEAD BOLT, CLS 10.9, M12 X 1.75, 70 mm LG, 30 mm LG THD			
54	8	FHH-MBJ075PCJ	HEX BOLT, FLANGED, CLS 8.8, M8 X 1.25, 20 mm LG, 16 mm LG THD			
55	4	FHH-MBJ080FCJ	HEX BOLT, FLANGED, CLS 8.8, M8 X 1.25, 25 mm LG, FULL			
56	116	FHH-MBM085FCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 30 mm LG, FULL			
57	32	FHH-MBM090PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 35 mm LG, 26 mm LG THD			
58	8	FHH-MBM095PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 40 mm LG, 26 mm LG THD			
59	6	FHH-MBM125PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 70 mm LG, 26 mm LG THD			
60	4	FHH-MBM130PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 75 mm LG, 26 mm LG THD			
61	8	FHH-MBR090PCM	HEX BOLT, FLANGED, CLS 10.9, M12 X 1.75, 35 mm LG, 30 mm LG THD			
62	2	FHH-MBR135PCM	HEX BOLT, FLANGED, CLS 10.9, M12 X 1.75, 80 mm LG, 30 mm LG THD			
63	4	SHC-MBM175PTA	SHCS, SST, M10 X 1.5, 120 mm LG, 32 mm LG THD			
64	8	PPH-MBA075FCE	SCREW, PPH, CLS 4.8, M5 X 0.8, 20 mm LG, FULL			
65	12	FTW-MBE000AJ	FLAT WASHER, M6			
66	4	FTW-MBM000AJ	FLAT WASHER, M10			
67	12	HLN-MBECH	LOCK NUT, CLS 8, M6 X 1			
68	3	HLN-MBMCL	LOCK NUT, CLS 10, M10 X 1.5			
69	2	HLN-MBRCL	LOCK NUT, CLS 10, M12 X 1.75			
70	8	FLN-MBACH	LOCK NUT, FLANGED, CLS 8, M5 X 0.8			
71	12	FLN-MBJCH	LOCK NUT, FLANGED, CLS 8, M8 X 1.25			
72	166	FLN-MBMCL	LOCK NUT, FLANGED, CLS 10, M10 X 1.5			
73	10	FLN-MBRCL	LOCK NUT, FLANGED, CLS 10, M12 X 1.75			



# **EUROPE**

Item Quantity Part No. Description					
1	4	0001373	GUSSET, END		
2	6	0001374	GUSSET, JOINING		
3	2	0008948	SIDE PLATE, LONG		
4	4	0008947	SIDE PLATE, SHORT		
5	4	0008949	SIDE PLATE ALIGNMENT DIAMOND		
6	4	0008950	SIDE PLATE ALIGNMENT NUT		
7	4	0008951	SIDE PLATE ALIGNMENT NOT		
8	3	0008942	CROSS BEAM		
9	1	0003935	CROSS BEAM, FRONT		
10	1	0009650	CROSS BEAM, TONGUE		
11	4	0001376	JACK MOUNT		
12	6	0006798	SWIVEL JACK, PIPE MOUNT, SIDEWIND SOCKET RECEIVER		
13	2	0006800	CRANK HANDLE, SOCKET DRIVE, 3/4 in [19 mm], SWIVEL JACK		
14	2	0008944	CANT HOOK LEVERAGE PLATE		
15	1	0003937	CROSS BEAM, AXLE		
16	1	0009155	AXLE MOUNT W/ FENDER ADAPTER, LEFT		
17	1	0009156	AXLE MOUNT W/ FENDER ADAPTER, RIGHT		
18	2	0009823	BRACKET, METAL FENDER, 175-80R13 WHEEL		
19	2	0004221	METAL FENDER, 175-80R13 WHEEL		
20	2	0001698	KNOB, MULTI-LOBE, 48 mm OD, M10 X 1.5, 30 mm LG		
21	3	0004728	LOCKING PIN, ROUND, 1/4 in DIA, 1-3/8 in USABLE LG, 2 in LG		
22	1	0009652	AXLE, COMBINED, 3500 lb		
23	2	0004165	WHEEL HUB, 1/2-20 LUGS		
24	2	0009010	ROTARY SHAFT SEAL, SPRING-LOADED, WIPER LIP, 43.5 mm SHAFT, 65 mm OD		
25	2	0006092	LOCK NUT, SLOTTED, M24 X 1.5, 16 mm THK		
26	2	0004753	COTTER PIN, 5/32 in DIA, 1-1/2 in LG		
27	2	0001552	WHEEL HUB DUST COVER, 5-BOLT, 1/2-20 LUGS		
28	10	0006201	LUG NUT, 1/2-20		
29	6	0001682	AXLE SHIM PLATE, 3 mm THK		
30	1	0001371	TONGUE		
31	1	0001372	TONGUE BRACKET		
33	1	0001702	HITCH BALL COUPLER, 50 mm [2 in] BALL, EUROPE		
34	2	0002249	JACK MOUNT		
35	1	0001382	SAFETY CHAIN		
36	1	0003938	TAILLIGHT BRACKET		
37	8	0001396	CABLE CLAMP, 1/2 in ID, 1-3/4 in LG		
39	1	0001676-2	LIGHTING WIRING HARNESS, WOODLANDER, EU		
40	2	0001379	TRIANGLE REFLECTOR BRACKET, EU		
41	2	0001390	REAR REFLECTOR, RED, EU		
42	4	0001391	SIDE REFLECTOR, AMBER, EU		
43	2	0001392	FRONT REFLECTOR, WHITE, EU		
44	2	0004445	WOODLANDER NAMEPLATE		
45	1	0005146	RATCHET STRAP, 50 mm WD, 4500 mm LG		
46	2	175-80R13 Wheel	WHEEL, 175/80R13		
47	2	L44649	ROLLER BEARING, TAPERED, 1-1/16 in SFT, 1-3/64 in HSG, .56 in WD		
48	2	L68149	ROLLER BEARING, TAPERED, 1-3/8 in SFT, 2-21/64 in HSG, 5/8 in WD		
49	12	HHB-MBE075FCJ	HEX HEAD BOLT, CLS 8.8, M6 X 1, 20 mm LG, FULL		



 
Item (	Quantity	Part No.	Description
50	1	HHB-MBM095FCM	HEX HEAD BOLT, CLS 10.9, M10 X 1.5, 40 mm LG, FULL
51	2	HHB-MBM215PCJ	HEX HEAD BOLT, CLS 8.8, M10 X 1.5, 160 mm LG, 26 mm LG THD
53	2	HHB-MBR155PCM	HEX HEAD BOLT, CLS 10.9, M12 X 1.75, 100 mm LG, 30 mm LG THD
54	8	FHH-MBJ075PCJ	HEX BOLT, FLANGED, CLS 8.8, M8 X 1.25, 20 mm LG, 16 mm LG THD
55	4	FHH-MBJ080FCJ	HEX BOLT, FLANGED, CLS 8.8, M8 X 1.25, 25 mm LG, FULL
56	116	FHH-MBM085FCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 30 mm LG, FULL
57	32	FHH-MBM090PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 35 mm LG, 26 mm LG THD
58	8	FHH-MBM095PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 40 mm LG, 26 mm LG THD
59	6	FHH-MBM125PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 70 mm LG, 26 mm LG THD
60	4	FHH-MBM130PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 75 mm LG, 26 mm LG THD
61	8	FHH-MBR090PCM	HEX BOLT, FLANGED, CLS 10.9, M12 X 1.75, 35 mm LG, 30 mm LG THD
62	2	FHH-MBR135PCM	HEX BOLT, FLANGED, CLS 10.9, M12 X 1.75, 80 mm LG, 30 mm LG THD
63	4	SHC-MBM175PTA	SHCS, SST, M10 X 1.5, 120 mm LG, 32 mm LG THD
64	12	PPH-MBA075FCE	SCREW, PPH, CLS 4.8, M5 X 0.8, 20 mm LG, FULL
65	12	FTW-MBE000AJ	FLAT WASHER, M6
66	4	FTW-MBM000AJ	FLAT WASHER, M10
67	12	HLN-MBECH	LOCK NUT, CLS 8, M6 X 1
68	3	HLN-MBMCL	LOCK NUT, CLS 10, M10 X 1.5
69	2	HLN-MBRCL	LOCK NUT, CLS 10, M12 X 1.75
70	14	FLN-MBACH	LOCK NUT, FLANGED, CLS 8, M5 X 0.8
71	12	FLN-MBJCH	LOCK NUT, FLANGED, CLS 8, M8 X 1.25
72	166	FLN-MBMCL	LOCK NUT, FLANGED, CLS 10, M10 X 1.5
73	10	FLN-MBRCL	LOCK NUT, FLANGED, CLS 10, M12 X 1.75



NOTES				

		MILLS

HM136MAX™ Woodlander® Operator's Manual



# WOODLAND