
WOODLANDER® TRAILER HM126/130

*Track Not Included



OPERATOR'S MANUAL

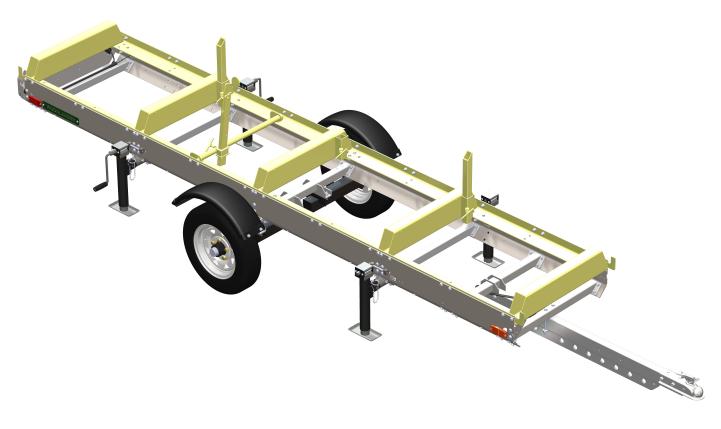

The Woodlander[®] is sold as an *off-road only* sawmill trailer compatible with HM126, HM130, HM130MAX[®], & HM136MAX[™] sawmills. Woodlander[®] is a registered trademark of Woodland Mills, Inc.

This page intentionally left blank.



TABLE OF CONTENTS

TABLE OF CONTENTS	1
	3
GENERAL SAFETY RULES	4
INSPECTION/MAINTENANCE	5
TECHNICAL SPECIFICATIONS	6
BOLT TORQUE SPECIFICATIONS	
	7
COMPONENT LISTS	8
TO-SCALE HARDWARE	11
BOLTS & SCREWS	11
SCALES	13
WASHERS	13
NUTS	14
SAWMILL COMPONENTS	15
SAWMILL HARDWARE	15
TRAILER ASSEMBLY	16
1. TOOLS REQUIRED	16
2. GUSSETS	17
3. SIDE PLATES	19
4. FRONT AND REAR CROSS BEAMS	22
5. SIDE PLATE-TO-RAIL OFFSET & BOLT TORQUING	24
6. INNER CROSS BEAMS AND JACK MOUNTS	29
7. AXLE MOUNTS AND AXLE CROSS BEAM	32
8. AXLE	34
9. TONGUE AND COUPLER	36
10. LIGHTING	38
11. NAMEPLATES	42
12. HEAD LOCK-DOWN PLATES	44
13. WHEELS	47
WHEEL ALIGNMENT ADJUSTMENT	48
14. FENDERS	49
15. SAFETY CHAIN	51



OPERATION	52	
LOCKING-DOWN THE SAWMILL HEAD	52	
REPLACEMENT PARTS ORDERING	54	
EXPLODED ASSEMBLY VIEWS	55	
CHASSIS AND TRACK, SIDE PLATE ALIGNMENT	55	
TONGUE	56	
NORTH AMERICA	56	
EUROPE	56	
AXLES, WHEELS, AND FENDERS	57	
LIGHTING	58	
NORTH AMERICA	58	
EUROPE	59	
NAMEPLATES	60	
SWIVEL JACKS	61	
HEAD LOCK-DOWN	62	
PARTS LISTS	63	
NORTH AMERICA	63	
	65	
NOTES	67	
NOTES	68	



INTRODUCTION

Congratulations on your purchase and welcome to Woodland Mills! This manual gives you the necessary information about your Woodlander[®] sawmill trailer so you will be able to use it properly. The entire manual must be read and understood before using the trailer. If any questions should arise that are not covered by this manual, please contact Woodland Mills, Inc.

٥v	WNER'S RECORD
Wo rea	ease take a moment to record the following information about your bodlander [®] sawmill trailer. If you need to call for assistance, please be ady to provide your model and serial numbers. This information will allow to help you more quickly when you call.
М	DDEL NUMBER
¢E	
3	
DA	ATE OF PURCHASE

The Woodlander[®] sawmill trailer is compatible with HM126, HM130, HM130MAX[®], & HM136MAX[™] sawmill and track systems for milling logs while the trailer is stationary and firmly supported on the ground. It is not intended to carry any additional weight or be used as a utility trailer.

The Woodlander[®] sawmill trailer is sold as <u>off-road only</u> trailers designed for certain applications. We strongly recommend the trailer not be modified and/or used for any application other than that for which it was designed. If you have any questions relative to a particular application, DO NOT use the trailer until you have first contacted Woodland Mills to determine if it can or should be performed using the product.

For technical questions and replacement parts, please contact Woodland Mills, Inc.



GENERAL SAFETY RULES

WARNING!

Read and understand all instructions. Failure to follow all instructions listed below may result serious injury.



WARNING!

The warnings, cautions, and instructions discussed in this instruction manual cannot cover all possible conditions or situations that could occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product but must be supplied by the operator.



WARNING!

Do not climb on or within the Woodlander[®] trailer as it is not safe. Use a certified step ladder or similar if reaching from the ground is not possible. Failure to heed this warning could result in serious injury.



WARNING!

The trailer is not designed to carry any additional weight other than the sawmill and trailer itself while being towed. Failure to heed this warning could result in damage to the trailer and/or the sawmill.

Damage caused by towing additional weight will void the warranty.



WARNING!

The Woodlander[®] sawmill trailers are designed and sold as off-road trailer packages and are recommended for this type of use. While they include some road safety components, every province, state, and country have unique regulations that need to be met for road-worthiness. It is important to comply with all regional regulations if attempting to convert the trailer for road use.



INSPECTION/MAINTENANCE

- Check the tires before all trips. Make sure they are inflated to the pressure shown on the tire.
- Grease the axle bearings every 3 months or 1000 miles [1600 km], whichever comes first.
- Check the tow hitch ball coupler. Make sure it is not damaged.
- Check the wheel lug nuts before all trips. Make sure they are torqued properly.
- Check the lights. Make sure all the lights work properly. Replace any lights that do not work.
- Inspect trailer before all trips for any damaged or loose parts.



TECHNICAL SPECIFICATIONS

Item	Specification
Trailer Axle	Independent Torsion Axle Design
Trailer Wheels	5 Bolts @ 4.5 in [114 mm] & 5.30-12 Approved Tires
Tire Pressure	Refer to Tire
Wheel Nut Torque	80 ft•lb [110 N•m]
Trailer Ball Coupler	2 in [50 mm]
Trailer Lights	LED Light Kit (stop, turn, tail, side markers, and license plate light)
Finish	Powder Coat Paint / Galvanized Steel
Fenders	Removable
Safety	Locking pins and safety straps to secure sawhead while travelling
Shipping Weight	640 lb [290 kg]
Product Weight	556 lb [252 kg]

BOLT TORQUE SPECIFICATIONS

Bolt (Thread Size)	Torque	
M5	78 in•lb [9 N•m]	
M6	133 in•lb [15 N•m]	
M8	333 in•lb [38 N•m]	
M10	53 ft•lb [72 N•m]	
M12	93 ft•lb [126 N•m]	




BOLT TORQUE WARNING!

The torque specifications listed above apply only to the track and trailer assembly outlined in this manual. They do <u>not</u> apply to the sawmill assembly. Follow the instructions in the sawmill operator's manual when assembling the carriage and sawhead.



UNPACKING

Remove all the parts from the steel crate. Set the crate aside as it will be used as a support for several of the assembly steps.

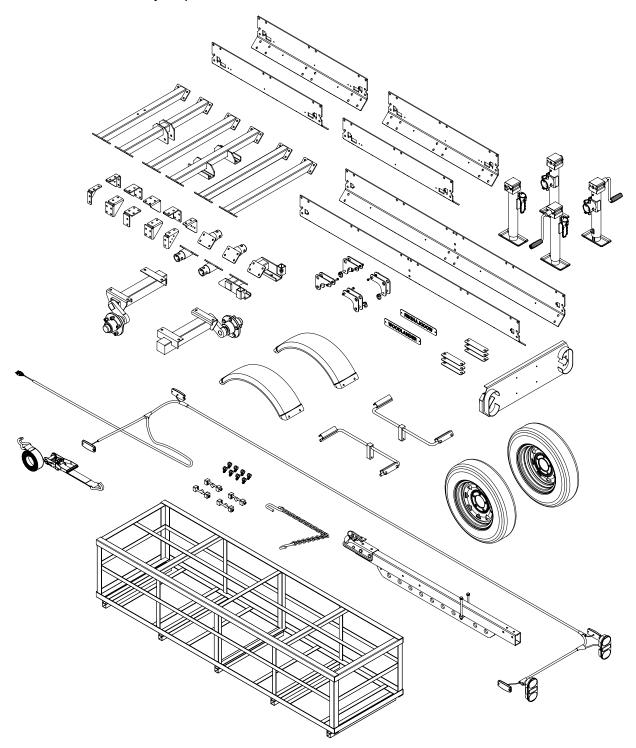



COMPONENT LISTS

Verify all component and hardware quantities are correct prior to assembling the trailer.

4x	End Gusset [0001373]	00000	4x	Jack Mount [0001376]	00
6x	Joining Gusset [0001374]		4x	Swivel Jack [0006798]	
2x	Long Side Plate [0008948]	di la constante de la constant	2x	Swivel Jack Handle [0006800]	
4x	Short Side Plate [0008947]		4x	Side Plate Alignment Diamond [0008949]	
3х	Cross Beam [0001369]		4x	Side Plate Alignment Nut [0008950]	
1x	Front Cross Beam [0001370]		4x	Side Plate Alignment Jaw [0008951]	
1x	Tongue Cross Beam [0010162]		1x	Axle Assembly Left	
1x	Axle Cross Beam [0001679]		1x	Axle Assembly Right	STOR STOR
1x	Left Axle Mount [0001680]		6x	Axle Shim Plate [0001682]	0
1x	Right Axle Mount [0001681]		2x	Wheel [5.30-12]	



1x	Tongue [0001371]		4x	Spacer [0004142]	
1x	Tongue Bracket [0001372]	0	4x	Lock-Down Pin [0001394]	0
2x	Knob M10 X 30 mm [0001698]		4x	Linch Pin [0004720]	
3x	Round Locking Pin [0004728]		2x	Nameplate [0004445]	• WOODLANDER •)
1x	Safety Chain [0001382]		1x	Hitch Ball Coupler (North America) [0001381]	
1x	Taillight Bracket [0001375]		1x	Ratchet Strap [0005146]	O
2x	Fender Bracket [0001683]	a family and the second	1x	Hitch Ball Coupler (Europe) [0001702]	00
2x	Fender [0001684]	Card Le 2	1x	Wiring Harness (Europe) [0001676-2]	
8x	Cable Clamp [0001396]		2x	Reflector Bracket (Europe) [0001379]	° °
1x	Wiring Harness (North America) [0001676-1]		2x	Rear Reflector (Europe) [0001390]	
8x	Lock-Down Plate [0001990]	0	4x	Side Reflector (Europe) [0001391]	



2x	Front Reflector (Europe) [0001392]				
----	--	--	--	--	--



TO-SCALE HARDWARE BOLTS & SCREWS

Hardware graphics are printed at 1:1 scale for ease of identification. Simply place the hardware over the image in the tables to verify it is the correct size.

16x	HHB-MBE075FCJ	M6 X 1 X 20 mm HEX BOLT
4x	HHB-MBE080FCJ	M6 X 1 X 25 mm HEX BOLT
4x	HHB-MBE095FCJ	M6 X 1 X 40 mm HEX BOLT
1x	HHB-MBM095FCM	M10 X 1.5 X 40 mm HEX BOLT
4x	HHB-MBM215PCM	M10 X 1.5 X 160 mm HEX BOLT
2x	HHB-MBR125PCM*	M12 X 1.75 X 70 mm HEX BOLT




2x	HHB-MBR155PCM**	M12 X 1.75 X 100 mm HEX BOLT		
8x	FHH-MBJ075FCJ	M8 X 1 X 20 mm FLANGED HEX BOLT		
4x	FHH-MBJ080FCJ	M8 X 1 X 25 mm FLANGED HEX BOLT		
116x	FHH-MBM085FCM	M10 X 1.5 X 30 mm FLANGED HEX BOLT		
32x	FHH-MBM090PCM	M10 X 1.5 X 35 mm FLANGED HEX BOLT		
8x	FHH-MBM095PCM	M10 X 1.5 X 40 mm FLANGED HEX BOLT		

29-Jan-2024


FTW-MBM000AJ

M10 FLAT WASHER

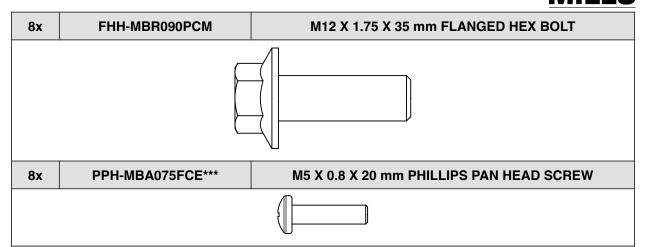


- * M12 X 1.75 X 70 mm Hex Bolts not applicable on European trailers


- ** M12 X 1.75 X 100 mm Hex Bolts not applicable on North American trailers

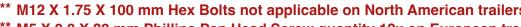



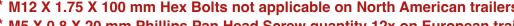



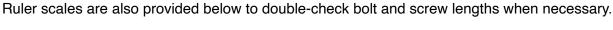

6x

Page 13 of 68

CENTIMETRES / MILLIMETRES

2

1

0010254-M-EN: Rev A

FTW-MBE000AJ

M6 FLAT WASHER

SCALES


INCHES

28x

WASHERS



NUTS

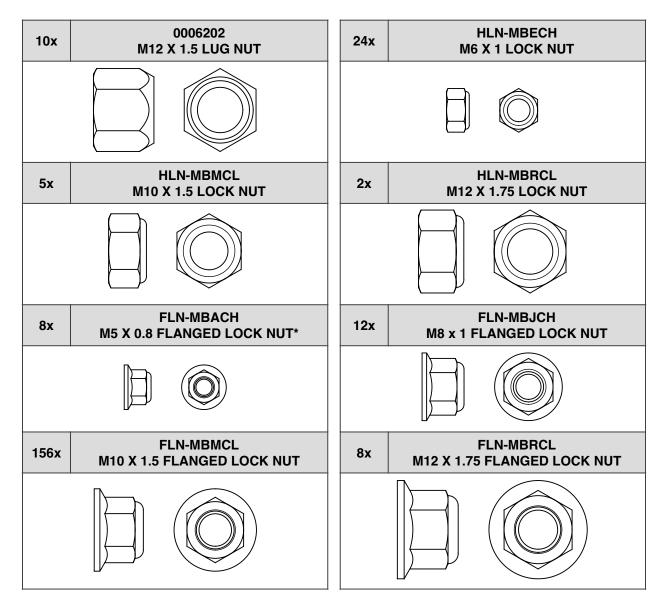

* M5 X 0.8 Flanged Lock Nut quantity 14x on European trailers



SAWMILL COMPONENTS

These components from the sawmill are required to build the trailer. They do not ship with the Woodlander[®] trailer.

4x	Track Rail [0001073]	1x	Centre Bunk [0001084]	
2x	Reinforcement Plate [0001072]	2x	Mid Bunk [0001080]	
4x	Carriage Stop [0001055]	2x	End Bunk [0001075]	
3x	T-Bolt M10 X 40 mm [0001059]			

SAWMILL HARDWARE

None of the hardware from the sawmill is used to build the trailer.



TRAILER ASSEMBLY

1. TOOLS REQUIRED

ΤοοΙ	Specification
Phillips Head Screwdriver	No. 3
Wrench/Socket	8 mm
Wrench/Socket	9 mm
Wrench/Socket	10 mm
Wrench/Socket	13 mm
Wrench/Socket	14 mm
Wrench/Socket	15 mm
Wrench/Socket	18 mm
Adjustable Wrench	Variable
Torque Wrench	Capable of 93 ft•lb [126 N•m]
Drill	Corded or cordless



2. GUSSETS

Using the hardware listed below, assemble the gussets to the track as shown on the next page.


Ensure the track width is set correctly (see track widths on next page), and measure diagonally to check for squareness. Torque all bolts per the table in section, <u>BOLT TORQUE</u> <u>SPECIFICATIONS</u>.

24x	M10 X 30 mm Flanged Hex Bolt	2x	Mid Bunk	
8x	M10 X 40 mm Flanged Hex Bolt	2x	Reinforcement Plate	000000000000000000000000000000000000000
32x	M10 Flanged Lock Nut	4x	End Gusset	00000
2x	End Bunk	 6x	Joining Gusset	
1x	Centre Bunk	4x	Track Rail	


Track components listed in these tables are *not* included with the trailer package, namely track rails, reinforcement plates, bunks, and carriage stops. These components are found in the sawmill crate. If the trailer was purchased for an existing sawmill (i.e. the sawmill is currently assembled), the track will need to be disassembled prior to building the trailer and the following assembly instructions performed.

Use the fasteners included with the sawmill trailer to assemble the track. The fasteners included with the sawmill track will *not* be used.



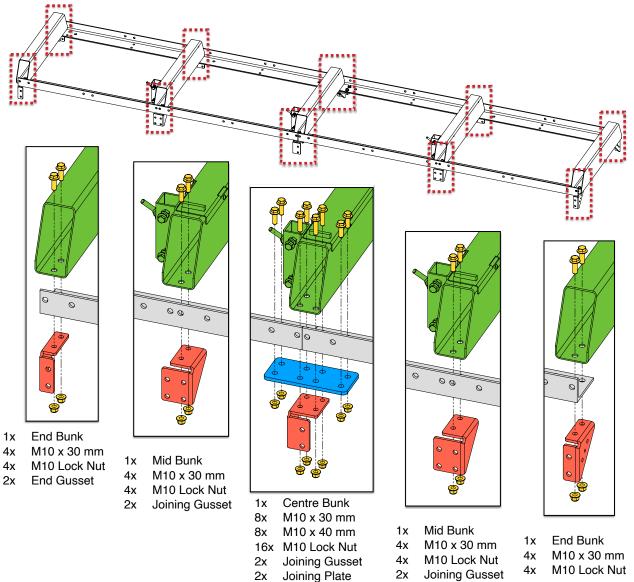


The above steps need to be completed on both left and right sides of the track. Make sure the gussets are flush with the outside face of the track rails as shown below.

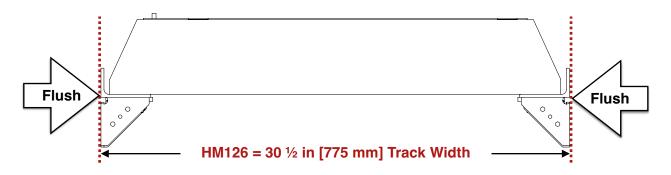



3. SIDE PLATES

Using the shipping crate as an assembly aid, lay two (2) 2X4s across the top the crate near each end. Position the track/gusset assembly on the 2X4s, ensuring it is centred end-to-end. The 2X4s need to be long enough to support the track rails but shorter than the track is wide.

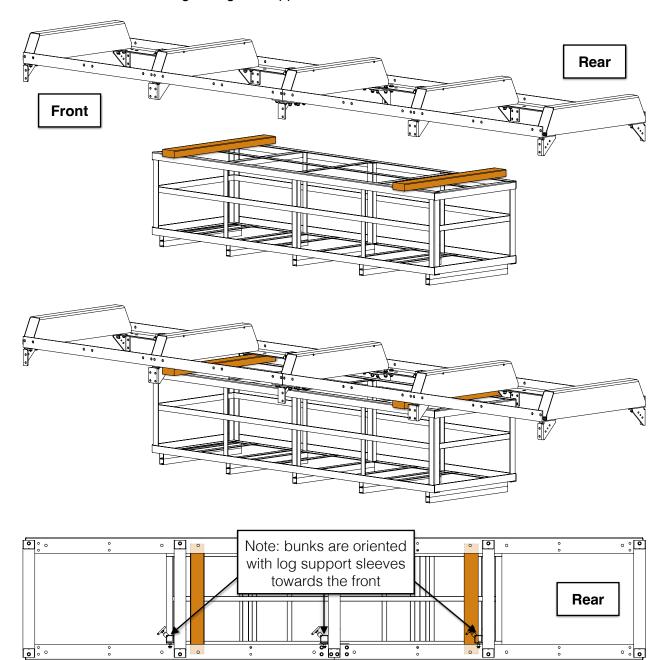


Use 29 ½ in [750 mm] long 2X4s.





Using the hardware listed below, hang the side plates using the M10 X 30 mm and M10 X 35 mm bolts. Do not tighten these bolts. The eight (8) M10 X 35 mm bolts are used with the carriage stops. The M10 X 30 mm bolts are used everywhere else.

68x	M10 X 30 mm Flanged Hex Bolt	2x	Long Side Plate	
8x	M10 X 35 mm Flanged Hex Bolt	4x	Short Side Plate	
76x	M10 Flanged Lock Nut	4x	Carriage Stop	

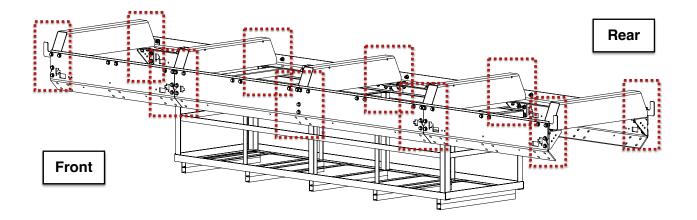



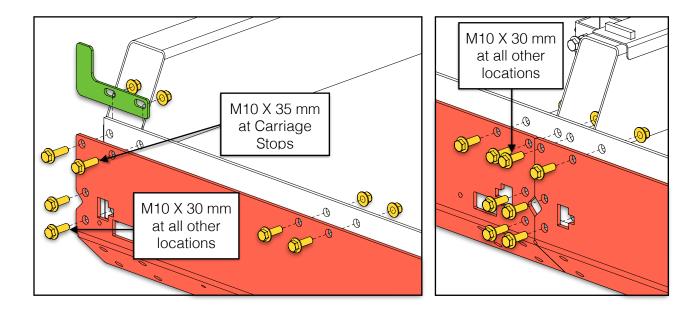


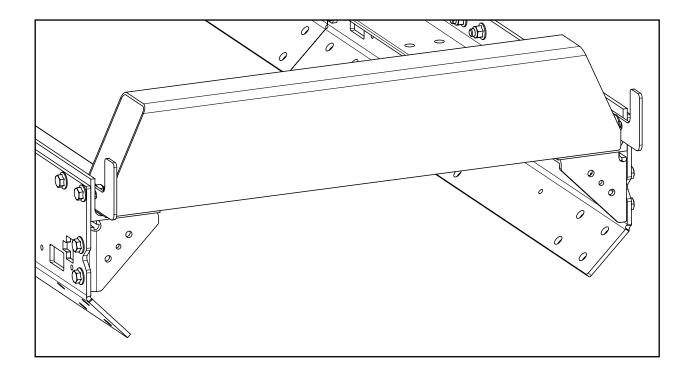





4. FRONT AND REAR CROSS BEAMS


Using the hardware listed below, install the front and rear cross beams (2 front, 1 rear). Ensure the cross beam with the two holes is assembled at the front. Do not tighten these bolts.

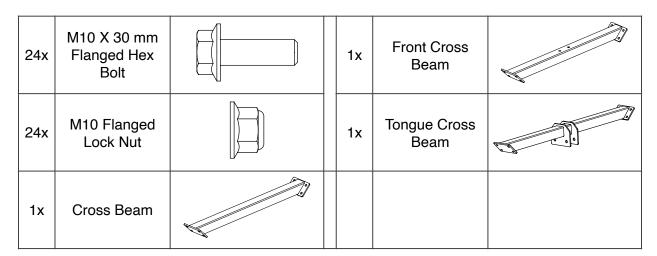

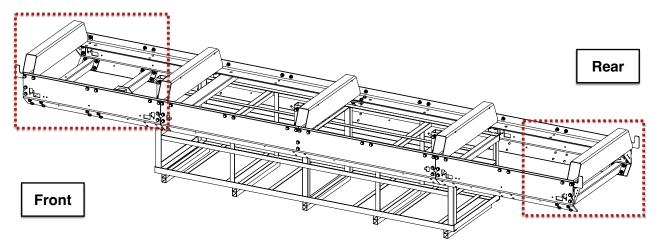



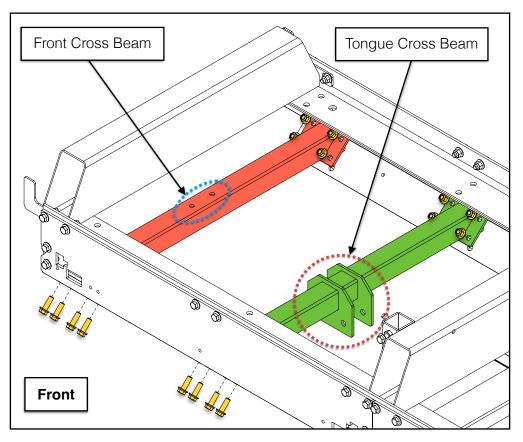


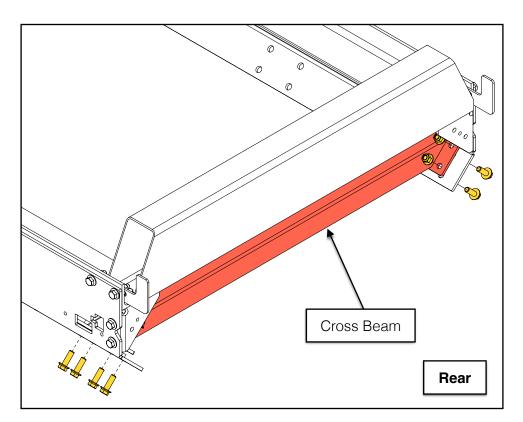




5. SIDE PLATE-TO-RAIL OFFSET & BOLT TORQUING

Install the components listed below to assist with correcting any side plate-to-rail offsets and gaps. Snug the M10x120 socket head cap screws, but do not fully tighten them. They will be torqued in the following steps.

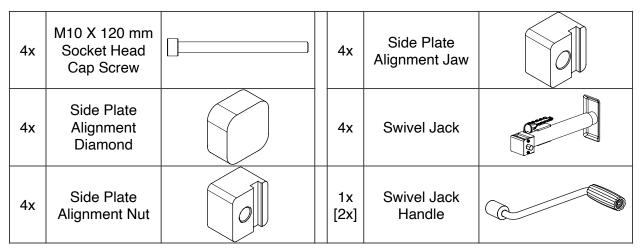


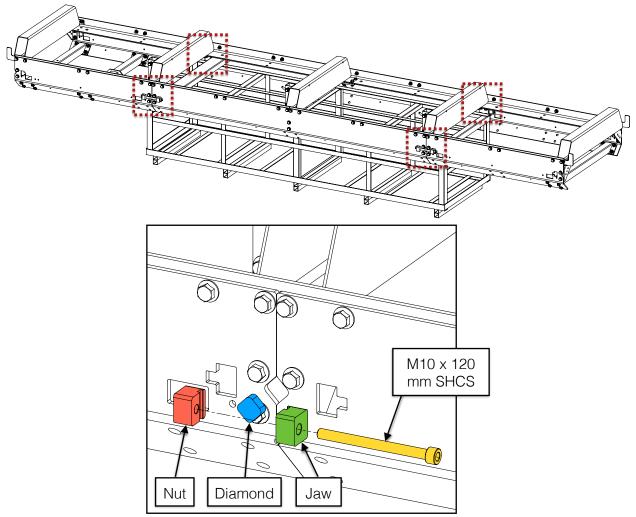

0010254-M-EN: Rev A




Before torquing the chassis bolts as shown on the following 3 pages, verify there is a $\frac{3}{12}$ in [10-13 mm] offset between the top of the track rails and the top of the side plates. The offset must be uniform along the entire length of the trailer on both sides.

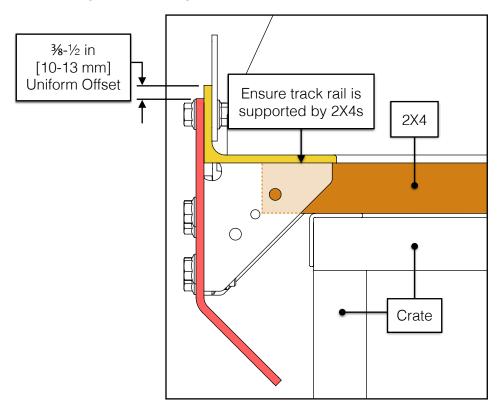


If the offset is not uniform, ensure the track is sitting on the 2X4s and not the crate. The side plates need to hang from the rails unobstructed, with only the force of gravity pulling them down.



Ensuring the side plate-to-rail offset is uniform, tighten and torque *only* the four (4) highlighted bolts securing the long side plate. Do this for both sides of the trailer.

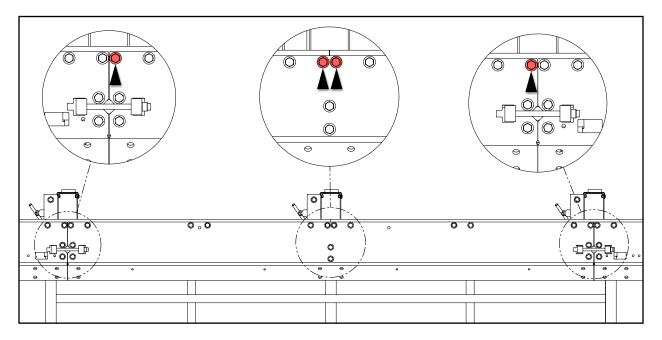

With the long side plate secured in place, note the gaps (if any) between the short side plates and the long side plates.

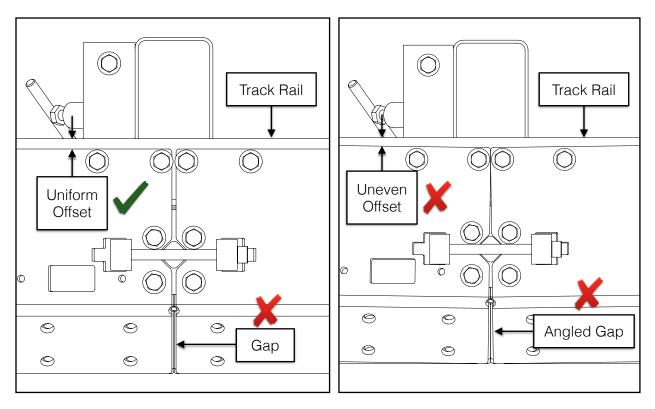


If there are gaps, they can be closed by tightening the M10 X 120 mm Socket Head Cap Screw.




Tighten all four (4) M10 X 120 mm Socket Head Cap Screws to close the gaps.

Remember to maintain a uniform offset between the top of the track rails and the top of the side plates when tightening the alignment hardware.

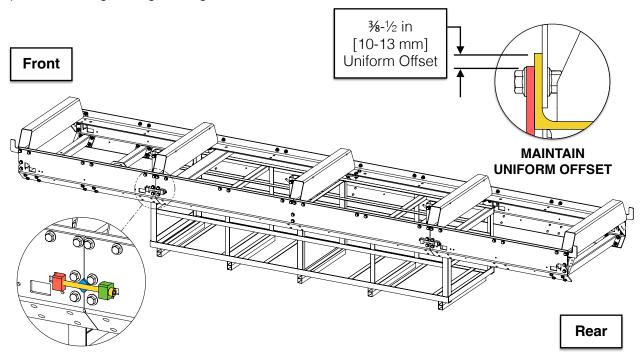


While maintaining a uniform side plate-to-rail offset, torque the remaining bolts per the table in section, *BOLT TORQUE SPECIFICATIONS*, starting from the centre and working towards the outer ends. Torque the M10x120 socket head cap screws used for the side plate alignment. Ensure the track is straight, level, and square during this procedure.

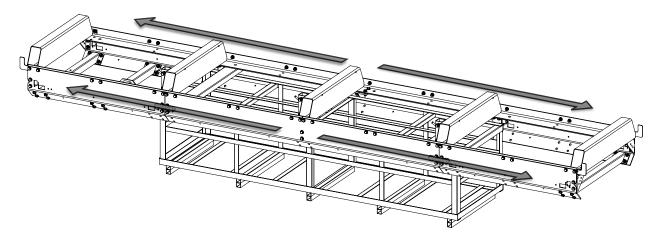



Position the swivel jack receivers under the front and rear *cross beams* as shown below and raise the assembly until the side plates are above the crate. Discard the two (2) 2X4s.

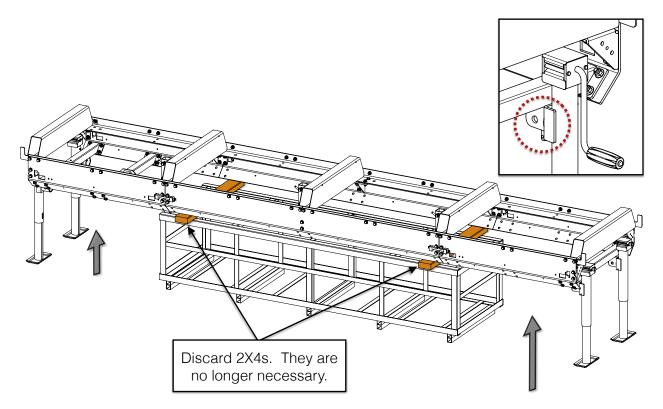





6. INNER CROSS BEAMS AND JACK MOUNTS

Using the hardware listed below, install the 2 remaining cross beams and 4 jack mounts. Torque all the bolts per the table in section *BOLT TORQUE SPECIFICATIONS*.

16x	M10 X 35 mm Flanged Hex Bolt	2x	Cross Beam	
16x	M10 Flanged Lock Nut	4x	Jack Mount	00

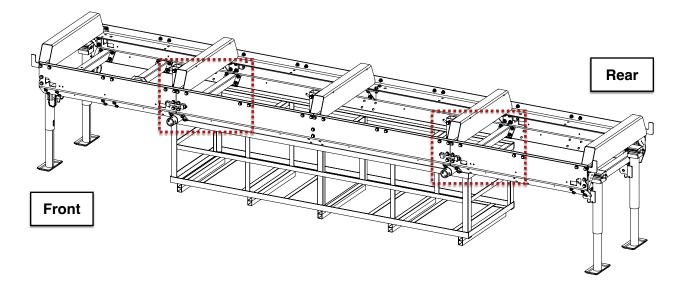




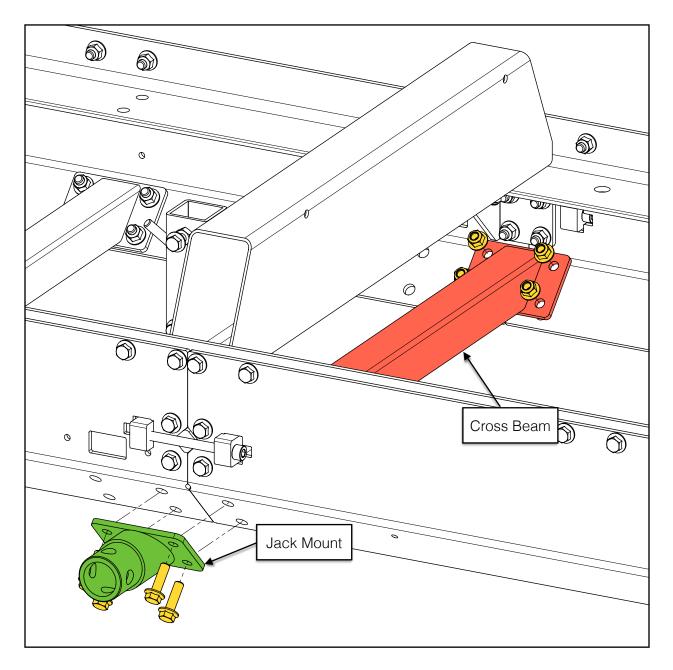




Next, lower the trailer until the cross beams are resting on the crate.

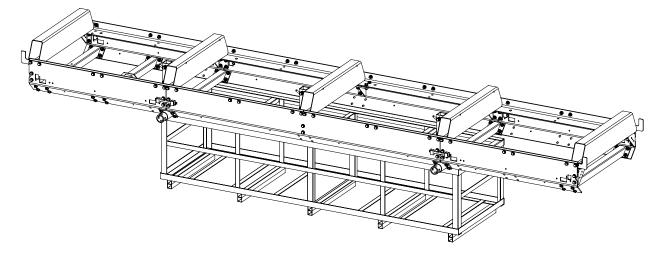

Slide the swivel jacks onto the jack mounts and secure them with the locking pins. Raise the jacks up to slide the crate out from under the trailer assembly. Place blocks of wood underneath each jack if necessary to achieve the required clearance.

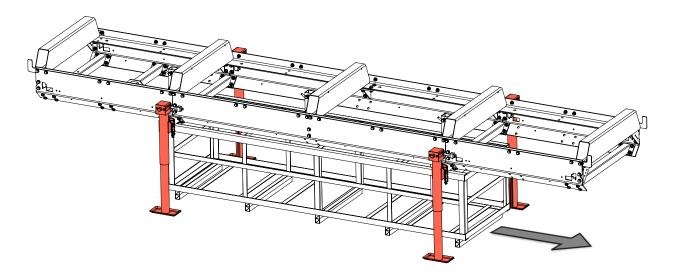





7. AXLE MOUNTS AND AXLE CROSS BEAM

Using the hardware listed below, install the axle mount cross beam and left/right axle mounts with fender adapter as shown. Tighten these bolts.

8x	M10 X 35 mm Flanged Hex Bolt		1x	Axle Mount w/ Fender Adapter [Left]	
8x	M10 Flanged Lock Nut		1x	Axle Mount w/ Fender Adapter [Right]	
2x	M10 X 30 mm Knob		1x	Axle Mount Cross Beam	

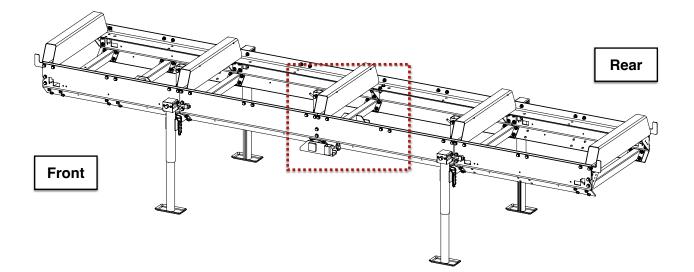



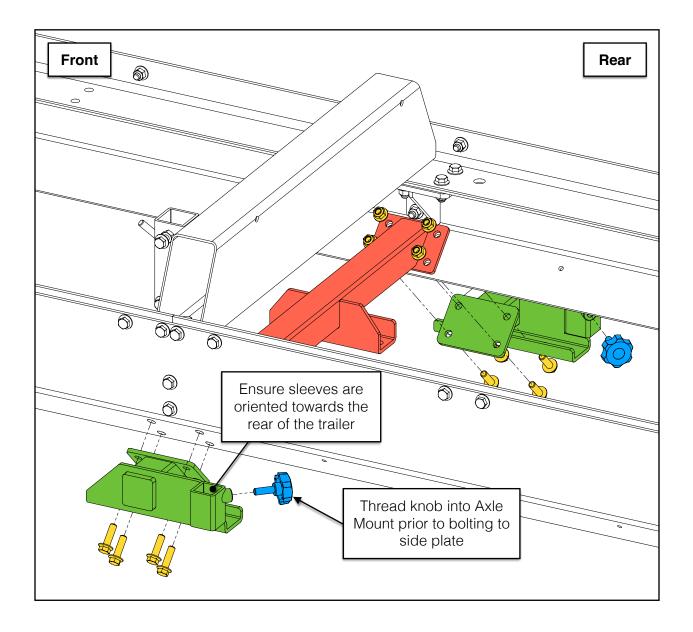




8. AXLE


Using the hardware listed below, install the axle as shown on the next page. Do not torque these bolts until instructed in step, *WHEELS*.

8x	M12 X 35 mm Flanged Hex Bolt	1x	Axle Assembly Left	
8x	M12 Flanged Lock Nut	1x	Axle Assembly Right	STATE OF
		[6x]	Axle Shim Plate	0

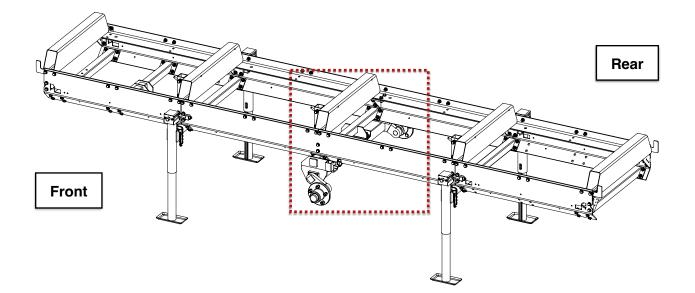



Place a bubble level across both axles and check for level. If the level is off, use axle shim plates between the inner axle mounting face and axle cross beam to ensure the axles ride level. The shims are not necessary if the axles sit level after assembly.

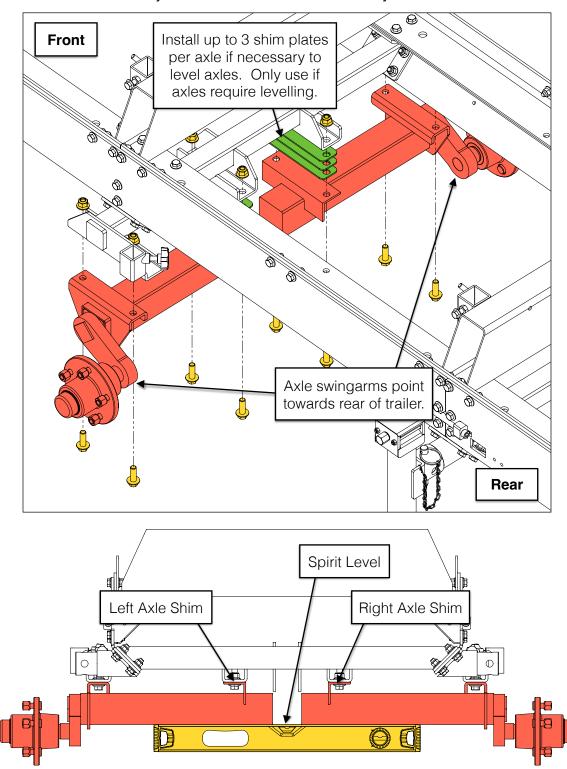





9. TONGUE AND COUPLER

Using the hardware listed below, install the trailer tongue and hitch coupler. Tighten these bolts.

2x	M12 X 100 mm Hex Bolt (Europe Only)	2x	M12 X 80 mm Flanged Hex Bolt	
2x	M12 X 70 mm Hex Bolt (North America)	2x	M12 Flanged Lock Nut	
2x	M12 Lock Nut	1x	Tongue	······································
2x	M10 X 160 mm Hex Bolt	1x	Hitch Coupler	00000
2x	M10 Flat Washer	1x	Tongue Bracket	0
2x	M10 Lock Nut	1x	Locking Pin	



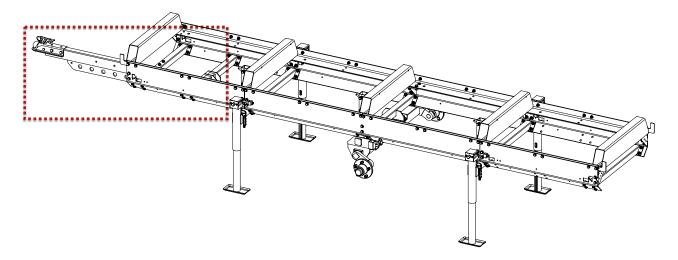

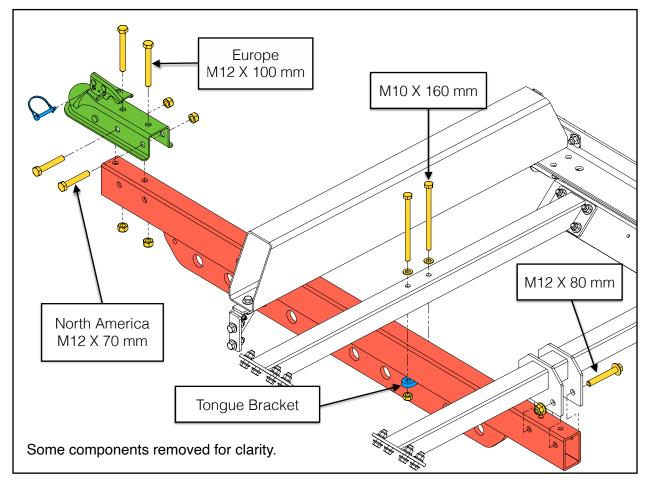



10. LIGHTING


Using the hardware listed below, install the taillight bracket and country appropriate wire harness. Use cable clamps to secure wire harness to side plates down right-side of trailer. Tighten all bolts.


On the European (**EU**) version, install the 4 side reflectors, 2 front reflectors, and 2 rear reflector brackets and reflectors as shown on the following pages. There are no red/amber side lights on the European wire harness like the ones included with the North American (**NA**) version.

4x	M8 X 25 mm Flanged Hex Bolt		1x	Taillight Bracket	
4x	M8 Flanged Lock Nut		2x	Rear Reflector Bracket (EU Only)	· · ·
8x	M6 X 20 mm Hex Bolt		2x	Rear Reflector (EU Only)	
8x	M6 Flat Washer	\bigcirc	4x	Side Reflector (EU Only)	
8x	M6 Lock Nut		2x	Front Reflector (EU Only)	
12x	M5 X 20 mm Pan Head Screw (8x NA Only)		8x	Cable Clamp	
14x	M5 Flanged Lock Nut (8x NA Only)		1x	Wire Harness (NA Only)	T.
			1x	Wire Harness (EU Only)	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~




Secure tail lights to the taillight bracket using M5 flanged lock nuts before mounting taillight bracket to trailer.

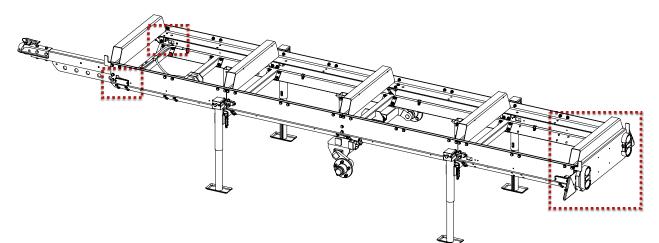

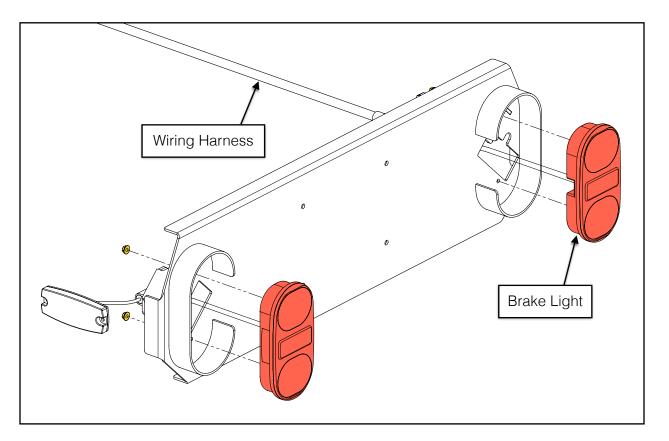

Note: Tail lights (North America and Europe) and side lights (North America only) are integral to the wire harness. They are shown exploded for assembly clarity.



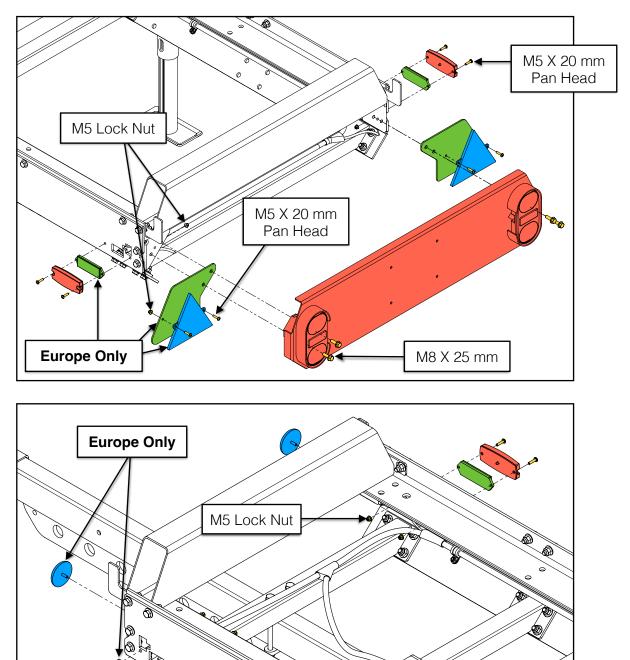



6

M5 X 20 mm Pan Head



Cable clamps are installed down the right-hand side of the trailer only (locations circled blue). Use the M6 X 20 mm hex bolts, M6 washers, and M6 lock nuts as shown. This applies to both North American and European models. The wire harness routing is shown below, highlighted red. The excess wire harness should be cable tied to the cross beams, highlighted green.

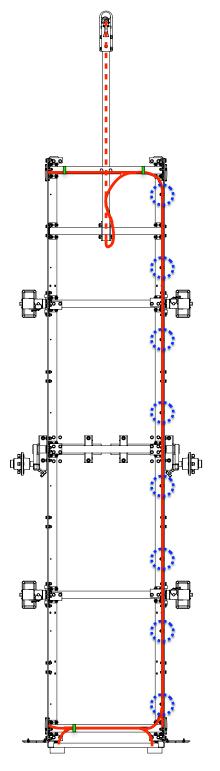

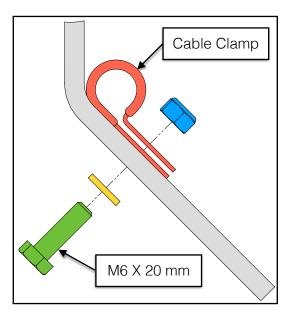





11. NAMEPLATES

Using the hardware listed below, install the two (2) Woodlander nameplates as shown.

4x	M6 X 20 mm Hex Bolt		2x	Woodlander Nameplate	• WOODLANDER •)
4x	M6 Flat Washer	\bigcirc	4x	M6 Lock Nut	

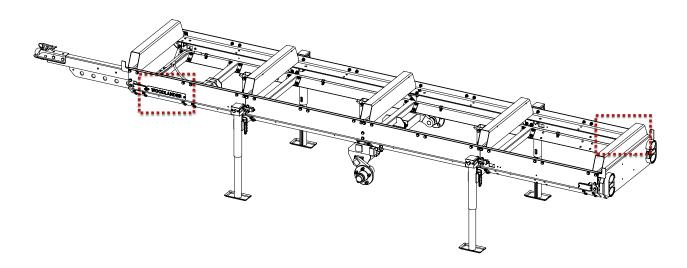



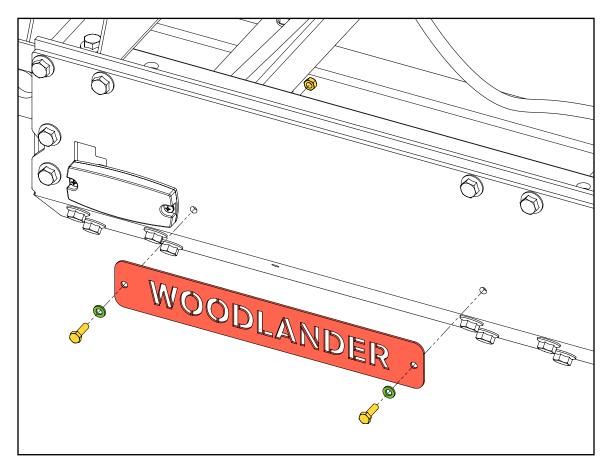






12. HEAD LOCK-DOWN PLATES

Place the assembled sawhead on the trailer. Using the hardware listed below, install the head lock down plates.


4x	M6 X 40 mm Hex Bolt	4x	Lock-Down Pin	[
4x	M6 X 25 mm Hex Bolt	4x	Linch Pin	
16x	M6 Flat Washer	8x	Head Lock- Down Plate	0
8x	M6 Lock Nut	1x	10 mm Drill Bit	

Remove the eight (8) spacers from the carriage wheel axles and discard the four (4) short spacers. Only the four (4) tall spacers will be reused in the next steps.

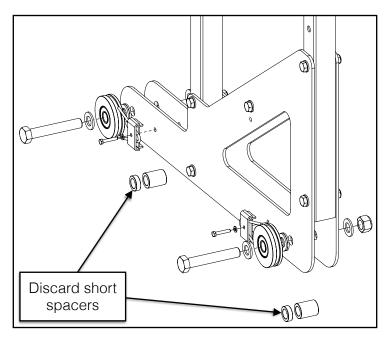




Using the provided M6 X 40 mm and M6 X 25 mm bolts, install the lock-down plates in place of the short spacers with the taller spacer sandwiched between. Reuse the four (4) M6 flat washers from the wheel sweepers on the sawmill when replacing the bolts.

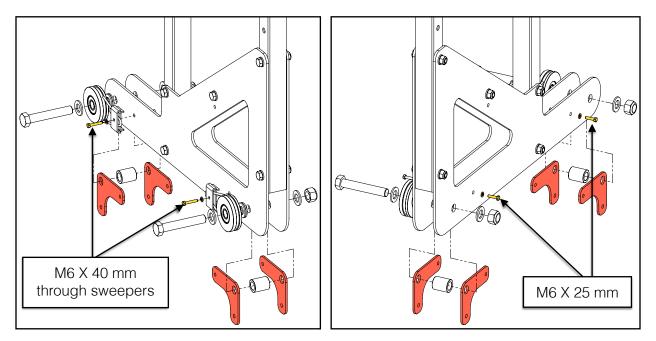

SAWHEAD CARRIAGE LOCK-DOWN POSITIONS

When deciding where to position the sawhead carriage, it is important to consider the tongue weight capacity of the tow vehicle. Lighter tongue weights are better suited for ATVs and smaller vehicles while heavier tongue weights work well with larger vehicles like pickup trucks.

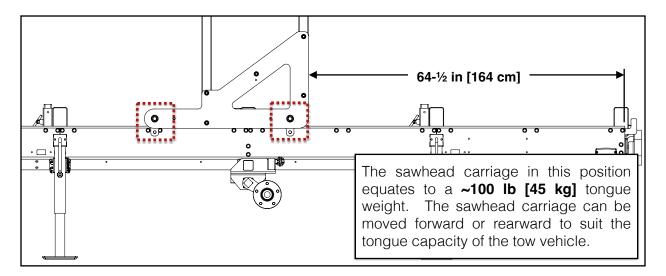


Note: Tolerance on tongue weights is approx. ±15 lb [±7 kg] depending on how many accessories are installed (Lap Siding, Power Head, Log Loading Ramp Kit, Toolbox, Cant Hook, etc.)

0010254-M-EN: Rev A



Drill four (4) holes for the lock-down plates using the 10 mm [$\frac{3}{6}$ in] drill bit provided with the Sawmill. Measure between 59 and 63 in [1498 and 1600 mm] from the rear edge of the track rail (*not* the carriage stop) to the rear post of the sawhead. Insert a locking pin into each hole as they are drilled. Secure each locking pin with a linch pin.

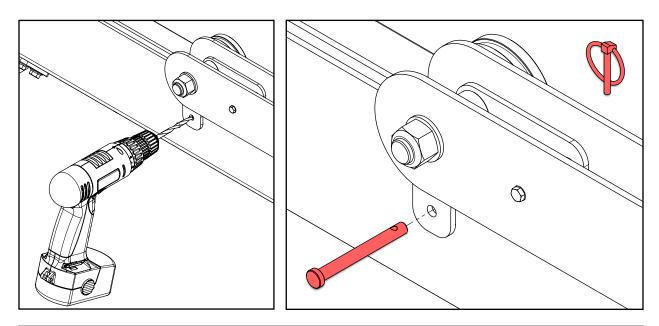




WARNING!

Use cutting oil when drilling holes for lock-down brackets or else the heat generated could ruin the drill bit and produce a rough surface finish.



13. WHEELS


Using the hardware listed below, install the tires on the axles. Using a torque wrench, torque the lug nuts to 80 ft·lb / 110 N·m following the pattern shown below.

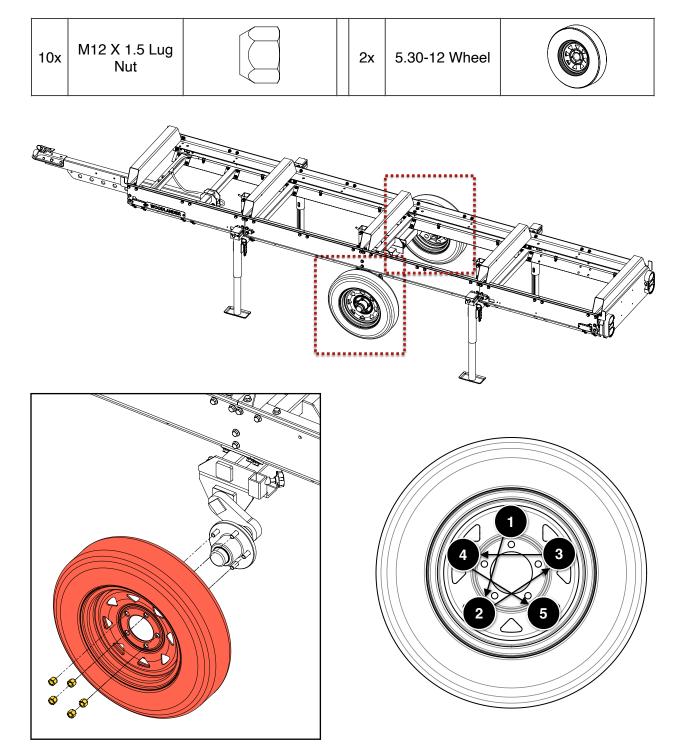



WHEEL ALIGNMENT ADJUSTMENT

With the wheels installed, observe their alignment to each other. If the wheels point inward (pigeon-toed) or outward (duck-footed), the axle position needs to be adjusted before the trailer can be towed behind a vehicle. One or both wheels may be affected.

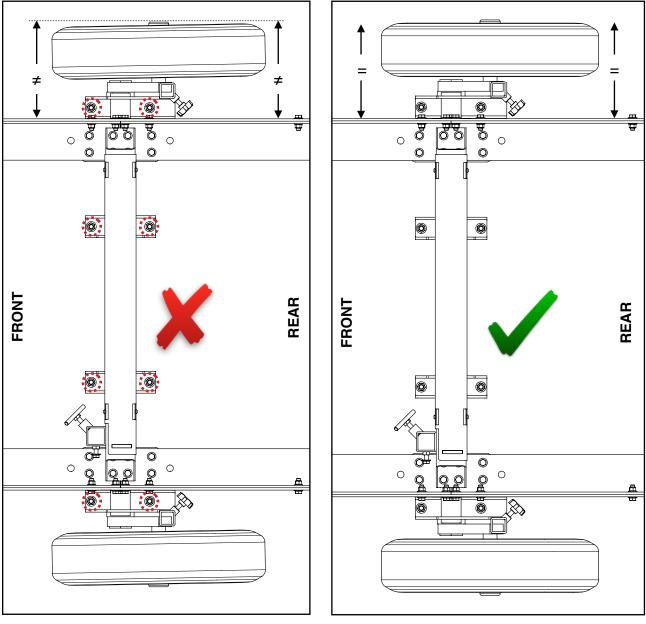

MISALIGNMENT

ALIGNED


If the wheels are parallel, tighten the axle bolts to the <u>specified torque</u> and proceed to the next section. However, if the wheels are *not* parallel, loosen the four (4) M12 bolts on the affected axle(s). Rotate the axle assembly and wheel until the wheels are parallel. Then tighten the axle bolts to the <u>specified torque</u>.



14. FENDERS


Using the hardware listed below, assemble the fenders to the fender brackets.

8x	M8 X 20 mm Flanged Hex Bolt	2x	Fender Bracket	a contraction of the second se
8x	M8 Flanged Lock Nut	2x	Fender	to a
		2x	Locking Pin	

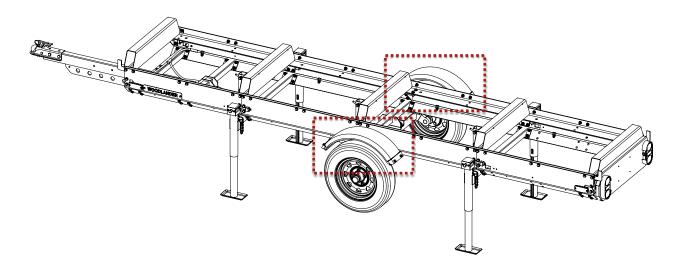




Fasten a metal fender to each fender bracket using four (4) M8 X 20 mm bolts and four (4) M8 flanged lock nuts. Fully tighten these bolts.

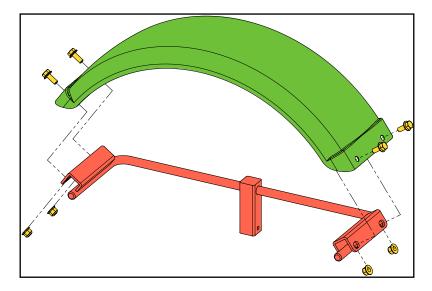

Slide the post on the fender bracket into the sleeve on the axle mount and insert the locking pin through the hole located at the bottom of the fender bracket post. Secure the fender/fender bracket sub-assembly using the M10 X 30 mm knob by threading it into the axle mount until tight.

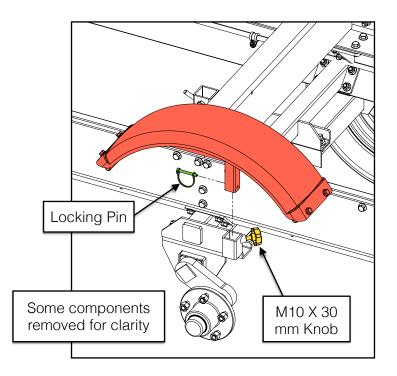




15. SAFETY CHAIN

Using the hardware below, install the safety chain on the trailer tongue.


1x	M10 X 40 mm Hex Bolt	1x	Safety Chain	
2x	M10 Flat Washer			
1x	M10 Lock Nut			

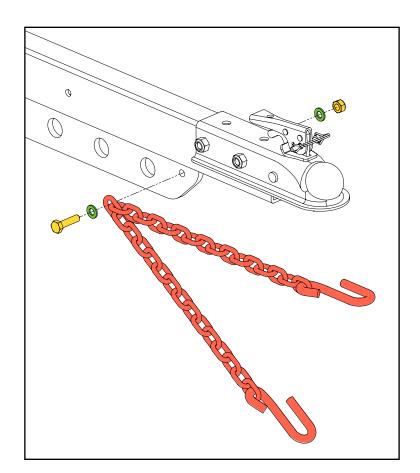




OPERATION LOCKING-DOWN THE SAWMILL HEAD

When transporting the trailer, it is imperative that the sawmill head is locked-down securely to the trailer. Start by inserting the four (4) locking pins through the lock-down brackets and secure them with linch pins.

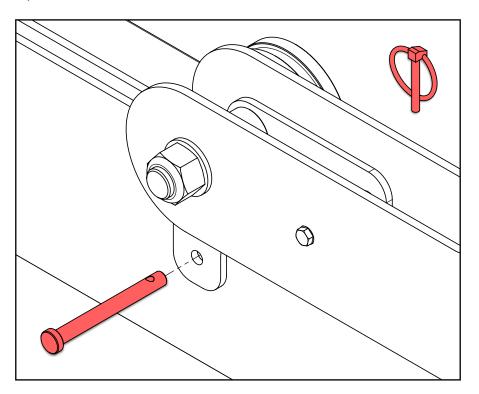


Next, route the included ratchet strap (shown below) around the sawmill and trailer to fully lockdown the sawmill head as shown on the next page.

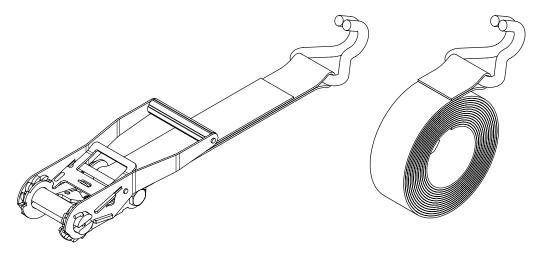




Lower the sawhead to its lowest position. Then insert the short strap hook into the cross beam lifting eye on one side of the sawmill, route the long strap down and under the bottom of the trailer, then up to the opposite lifting eye. Ratchet the strap tight until there is no slack.

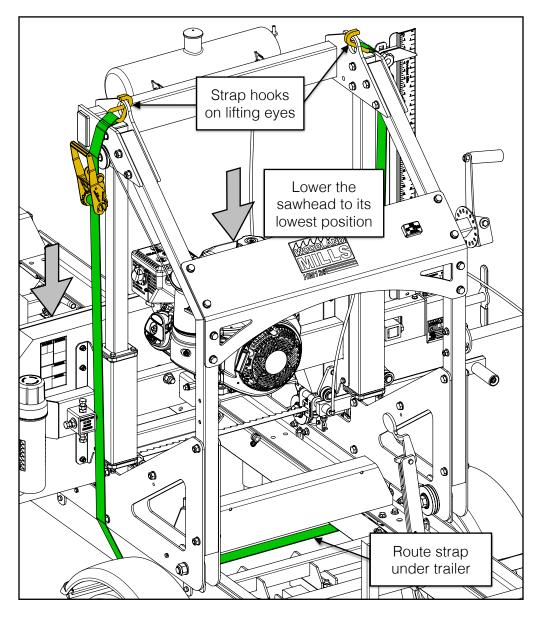



REPLACEMENT PARTS ORDERING

When ordering replacement parts, first locate the balloon number(s) from the appropriate *exploded assembly view* as shown in the example below:

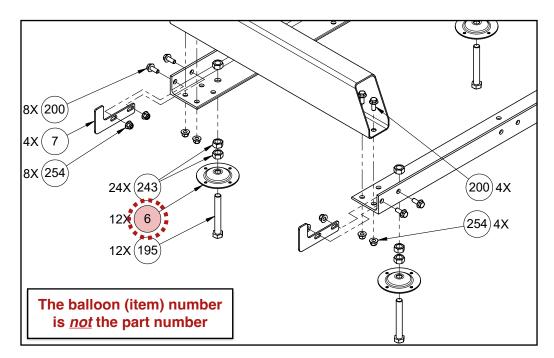

Next, turn to the *Parts Lists* section and locate the balloon number in the "Item" column:


PARTS LIST					
	Qua	ntity			
ltem	14 hp	9.5 hp	Part No.	Description	
1	4	4	0001073	TRACK RAIL, 58.5 mm TALL	
2	2	2	0001075	LOG BUNK, END	
	2	2	0001080	LOG BUNK, MID	
4	1	1	0001084	LOG BUNK, CENTER	
•	2	2	0001072	REINFORCEMENT PLATE, 90 X 200 mm	
6		12	0001071	LEVELLING FOOT BASE	
7	4	4	0001055	CARRIAGE STOP	
8	1	1	0001062	LOG CLAMP SHAFT AND BRACKET WELDMENT	

Record the part number (e.g. 0001071, HHB-MBM080FCJ, etc.) in the "Part No." column.

Contact Woodland Mills through the website or via phone/email. If possible, include the invoice or sales number from the purchased product so an associated account can be located. If the account has multiple addresses on file, please indicate to which address the replacement part(s) will be shipped.



EXPLODED ASSEMBLY VIEWS CHASSIS AND TRACK, SIDE PLATE ALIGNMENT

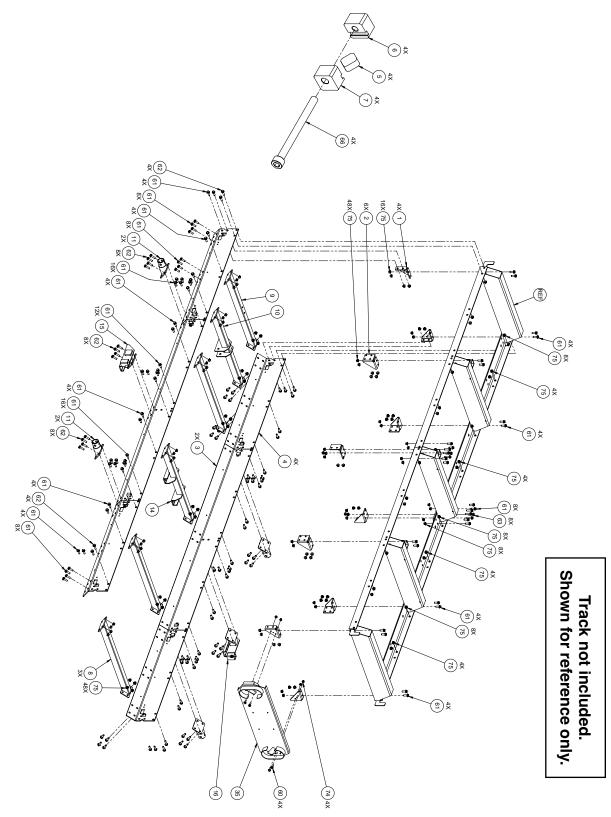


Page 55 of 68




TONGUE

NORTH AMERICA

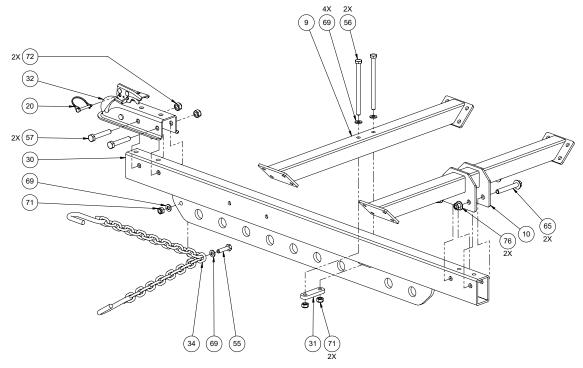


EUROPE

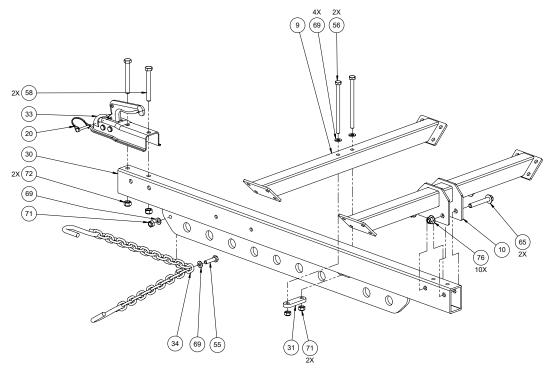




AXLES, WHEELS, AND FENDERS

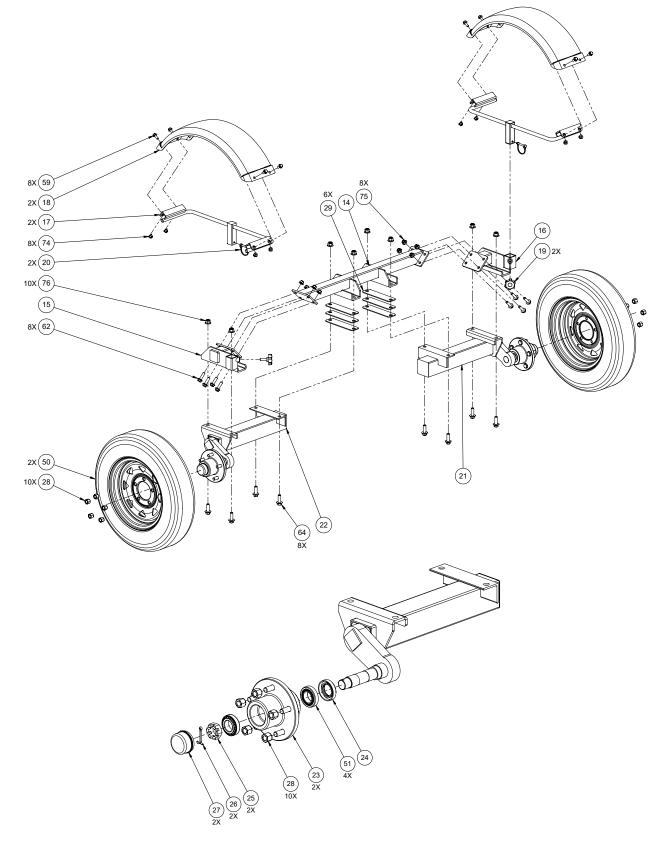



LIGHTING

NORTH AMERICA

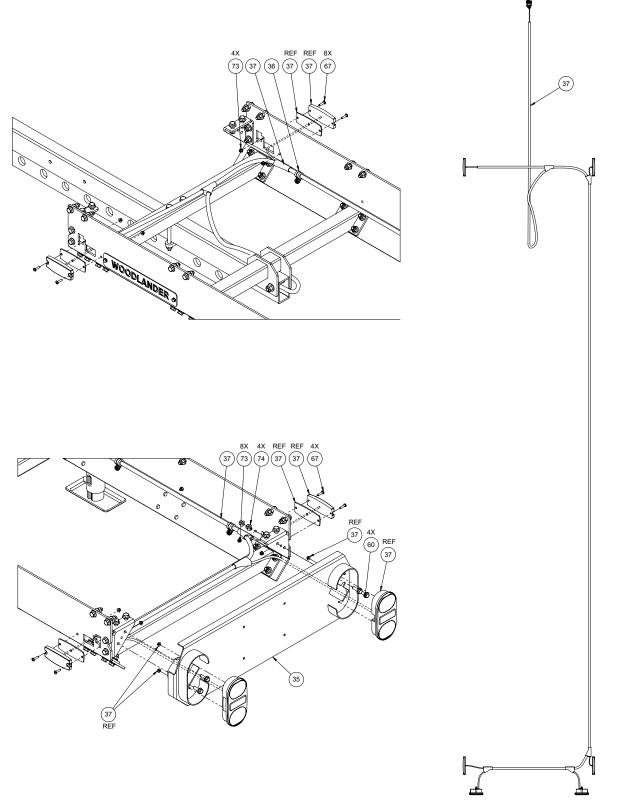


0010254-M-EN: Rev A

29-Jan-2024




EUROPE

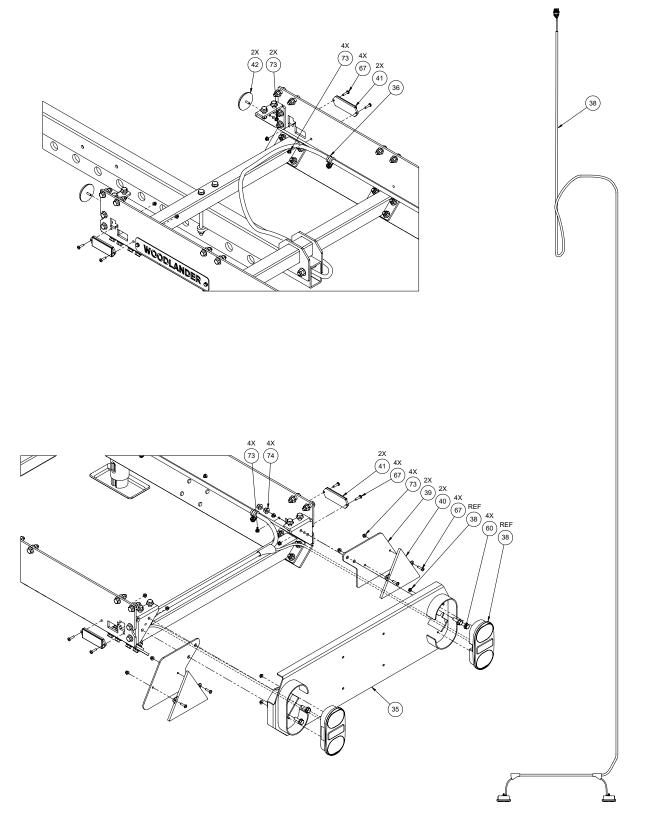


29-Jan-2024




NAMEPLATES

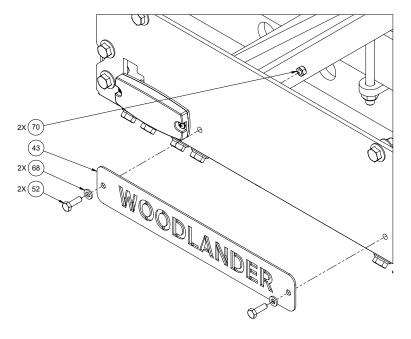

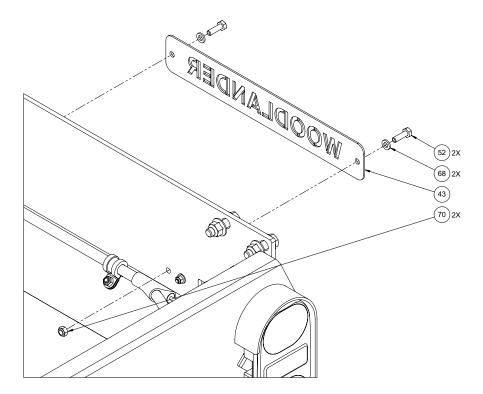




SWIVEL JACKS

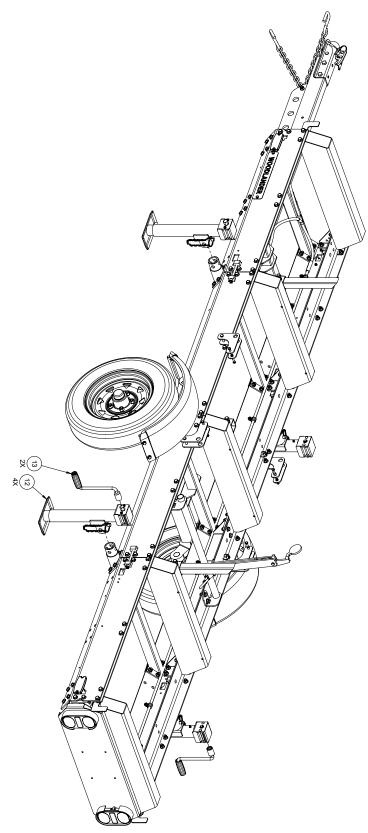



HEAD LOCK-DOWN

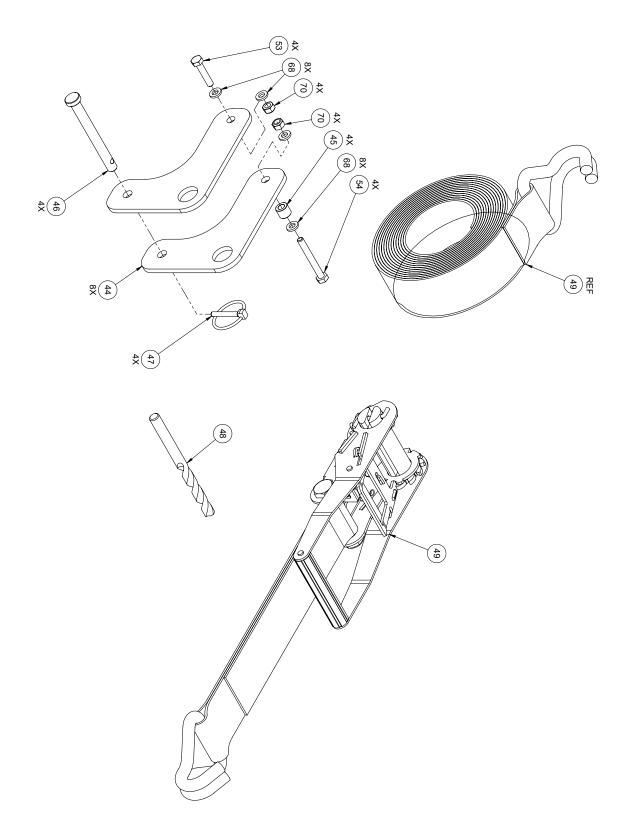



PARTS LISTS NORTH AMERICA

Item	Quantity	Part No.	Description
1	4	0001373	GUSSET, END
2	6	0001374	GUSSET, JOINING
3	2	0008948	SIDE PLATE, LONG
4	4	0008947	SIDE PLATE, SHORT
5	4	0008949	SIDE PLATE ALIGNMENT DIAMOND
6	4	0008950	SIDE PLATE ALIGNMENT NUT
7	4	0008951	SIDE PLATE ALIGNMENT JAW
8	3	0001369	CROSS BEAM
9	1	0001370	CROSS BEAM, FRONT
10	1	0010162	CROSS BEAM, TONGUE
11	4	0001376	JACK MOUNT
12	4	0006798	SWIVEL JACK, PIPE MOUNT, SIDEWIND SOCKET RECEIVER
13	2	0006800	CRANK HANDLE, SOCKET DRIVE, 3/4 in [19 mm], SWIVEL JACK
14	1	0001679	CROSS BEAM, AXLE
15	1	0001680	AXLE MOUNT W/ FENDER ADAPTER, LEFT
16	1	0001681	AXLE MOUNT W/ FENDER ADAPTER, RIGHT
17	2	0001683	BRACKET, METAL FENDER, 750/850/1000 kg AXLE
18	2	0001684	METAL FENDER, 5.30-12 WHEEL
19	2	0001698	KNOB, MULTI-LOBE, 48 mm OD, M10 X 1.5, 30 mm LG
20	3	0004728	LOCKING PIN, ROUND, 1/4 in DIA, 1-3/8 in USABLE LG, 2 in LG
21	1	0004527	AXLE, RIGHT, 1000 kg
22	1	0004528	AXLE, LEFT, 1000 kg
23	2	0001549	WHEEL HUB, 5-BOLT, 4-1/2 in [114.3 mm] BC, M12 X 1.5 LUGS
24	2	0004762	ROTARY SHAFT SEAL, SPRING-LOADED, WIPER LIP, 30 mm SHAFT, 50 mm OD
25	2	0006092	LOCK NUT, SLOTTED, M24 X 1.5, 16 mm THK
26	2	0004753	COTTER PIN, 5/32 in DIA, 1-1/2 in LG
27	2	0001439	WHEEL HUB DUST COVER, 5-BOLT, M12 LUGS
28	10	0006202	LUG NUT, M12 X 1.5
29	6	0001682	AXLE SHIM PLATE, 3 mm THK
30	1	0001371	TONGUE
31	1	0001372	TONGUE BRACKET
32	1	0001381	HITCH BALL COUPLER, 2 in [50.8 mm] BALL, NORTH AMERICA
34	1	0001382	SAFETY CHAIN
35	1	0001375	TAILLIGHT BRACKET
36	8	0001396	CABLE CLAMP, 1/2 in ID, 1-3/4 in LG
37	1	0001676-1	LIGHTING WIRING HARNESS, WOODLANDER, NA
43	2	0004445	WOODLANDER NAMEPLATE, 2-HOLE
44	8	0001990	HEAD LOCK-DOWN PLATE
45	4	0004142	SPACER, 6.5 ID X 12 OD X 10 mm LG, BLACK
46	4	0001394	LOCK-DOWN PIN, 9.5 mm DIA, 77 mm USEABLE LG
47	4	0004720	LINCH PIN, 4.5 mm DIA, 25 mm USEABLE LG, 32 mm LG
48	1	0004742	DRILL BIT, 10 mm, JOBBERS LG
49	1	0005146	RATCHET STRAP, 50 mm WD, 4500 mm LG
50	2	5.30-12	WHEEL, 5.30-12



Item	Quantity	Part No.	Description
51	4	L44649	ROLLER BEARING, TAPERED, 1-1/16 in SFT, 1-3/64 in HSG, .56 in WD
52	12	HHB-MBE075FCJ	HEX HEAD BOLT, CLS 8.8, M6 X 1, 20 mm LG, FULL
53	4	HHB-MBE085FCJ	HEX HEAD BOLT, CLS 8.8, M6 X 1, 30 mm LG, FULL
54	4	HHB-MBE105FCJ	HEX HEAD BOLT, CLS 8.8, M6 X 1, 50 mm LG, FULL
55	1	HHB-MBM095FCM	HEX HEAD BOLT, CLS 10.9, M10 X 1.5, 40 mm LG, FULL
56	2	HHB-MBM215PCM	HEX HEAD BOLT, CLS 10.9, M10 X 1.5, 160 mm LG, 26 mm LG THD
57	2	HHB-MBR125PCM	HEX HEAD BOLT, CLS 10.9, M12 X 1.75, 70 mm LG, 30 mm LG THD
59	8	FHH-MBJ075PCJ	HEX BOLT, FLANGED, CLS 8.8, M8 X 1.25, 20 mm LG, 16 mm LG THD
60	4	FHH-MBJ080FCJ	HEX BOLT, FLANGED, CLS 8.8, M8 X 1.25, 25 mm LG, FULL
61	116	FHH-MBM085FCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 30 mm LG, FULL
62	32	FHH-MBM090PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 35 mm LG, 26 mm LG THD
63	8	FHH-MBM095PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 40 mm LG, 26 mm LG THD
64	8	FHH-MBR090PCM	HEX BOLT, FLANGED, CLS 10.9, M12 X 1.75, 35 mm LG, 30 mm LG THD
65	2	FHH-MBR135PCM	HEX BOLT, FLANGED, CLS 10.9, M12 X 1.75, 80 mm LG, 30 mm LG THD
66	4	SHC-MBM175PTA	SHCS, SST, M10 X 1.5, 120 mm LG, 32 mm LG THD
67	8	PPH-MBA075FCE	SCREW, PPH, CLS 4.8, M5 X 0.8, 20 mm LG, FULL
68	28	FTW-MBE000AJ	FLAT WASHER, M6
69	4	FTW-MBM000AJ	FLAT WASHER, M10
70	20	HLN-MBECH	LOCK NUT, CLS 8, M6 X 1
71	3	HLN-MBMCL	LOCK NUT, CLS 10, M10 X 1.5
72	2	HLN-MBRCL	LOCK NUT, CLS 10, M12 X 1.75
73	8	FLN-MBACH	LOCK NUT, FLANGED, CLS 8, M5 X 0.8
74	12	FLN-MBJCH	LOCK NUT, FLANGED, CLS 8, M8 X 1.25
75	156	FLN-MBMCL	LOCK NUT, FLANGED, CLS 10, M10 X 1.5
76	10	FLN-MBRCL	LOCK NUT, FLANGED, CLS 10, M12 X 1.75



EUROPE

Item	Quantity	Part No.	Description
1	4	0001373	GUSSET, END
2	6	0001374	GUSSET, JOINING
3	2	0008948	SIDE PLATE, LONG
4	4	0008947	SIDE PLATE, SHORT
5	4	0008949	SIDE PLATE ALIGNMENT DIAMOND
6	4	0008950	SIDE PLATE ALIGNMENT NUT
7	4	0008951	SIDE PLATE ALIGNMENT JAW
8	3	0001369	CROSS BEAM
9	1	0001370	CROSS BEAM, FRONT
10	1	0010162	CROSS BEAM, TONGUE
11	4	0001376	JACK MOUNT
12	4	0006798	SWIVEL JACK, PIPE MOUNT, SIDEWIND SOCKET RECEIVER
13	2	0006800	CRANK HANDLE, SOCKET DRIVE, 3/4 in [19 mm], SWIVEL JACK
14	1	0001679	CROSS BEAM, AXLE
15	1	0001680	AXLE MOUNT W/ FENDER ADAPTER, LEFT
16	1	0001681	AXLE MOUNT W/ FENDER ADAPTER, RIGHT
17	2	0001683	BRACKET, METAL FENDER, 750/850/1000 kg AXLE
18	2	0001684	METAL FENDER, 5.30-12 WHEEL
19	2	0001698	KNOB, MULTI-LOBE, 48 mm OD, M10 X 1.5, 30 mm LG
20	3	0004728	LOCKING PIN, ROUND, 1/4 in DIA, 1-3/8 in USABLE LG, 2 in LG
21	1	0004527	AXLE, RIGHT, 1000 kg
22	1	0004528	AXLE, LEFT, 1000 kg
23	2	0001549	WHEEL HUB, 5-BOLT, 4-1/2 in [114.3 mm] BC, M12 X 1.5 LUGS
24	2	0004762	ROTARY SHAFT SEAL, SPRING-LOADED, WIPER LIP, 30 mm SHAFT, 50 mm OD
25	2	0006092	LOCK NUT, SLOTTED, M24 X 1.5, 16 mm THK
26	2	0004753	COTTER PIN, 5/32 in DIA, 1-1/2 in LG
27	2	0001439	WHEEL HUB DUST COVER, 5-BOLT, M12 LUGS
28	10	0006202	LUG NUT, M12 X 1.5
29	6	0001682	AXLE SHIM PLATE, 3 mm THK
30	1	0001371	TONGUE
31	1	0001372	TONGUE BRACKET
33	1	0001702	HITCH BALL COUPLER, 50 mm [2 in] BALL, EUROPE
34	1	0001382	SAFETY CHAIN
35	1	0001375	TAILLIGHT BRACKET
36	8	0001396	CABLE CLAMP, 1/2 in ID, 1-3/4 in LG
38	1	0001676-2	LIGHTING WIRING HARNESS, WOODLANDER, EU
39	2	0001379	TRIANGLE REFLECTOR BRACKET, EU
40	2	0001390	REAR REFLECTOR, RED, EU
41	4	0001391	SIDE REFLECTOR, AMBER, EU
42	2	0001392	FRONT REFLECTOR, WHITE, EU
43	2	0004445	WOODLANDER NAMEPLATE, 2-HOLE
44	8	0001990	HEAD LOCK-DOWN PLATE
45	4	0004142	SPACER, 6.5 ID X 12 OD X 10 mm LG, BLACK
46	4	0001394	LOCK-DOWN PIN, 9.5 mm DIA, 77 mm USEABLE LG
47	4	0004720	LINCH PIN, 4.5 mm DIA, 25 mm USEABLE LG, 32 mm LG
48	1	0004742	DRILL BIT, 10 mm, JOBBERS LG
49	1	0005146	RATCHET STRAP, 50 mm WD, 4500 mm LG



Item	Quantity	Part No.	Description
50	2	5.30-12	WHEEL, 5.30-12
51	4	L44649	ROLLER BEARING, TAPERED, 1-1/16 in SFT, 1-3/64 in HSG, .56 in WD
52	12	HHB-MBE075FCJ	HEX HEAD BOLT, CLS 8.8, M6 X 1, 20 mm LG, FULL
53	4	HHB-MBE085FCJ	HEX HEAD BOLT, CLS 8.8, M6 X 1, 30 mm LG, FULL
54	4	HHB-MBE105FCJ	HEX HEAD BOLT, CLS 8.8, M6 X 1, 50 mm LG, FULL
55	1	HHB-MBM095FCM	HEX HEAD BOLT, CLS 10.9, M10 X 1.5, 40 mm LG, FULL
56	2	HHB-MBM215PCM	HEX HEAD BOLT, CLS 10.9, M10 X 1.5, 160 mm LG, 26 mm LG THD
58	2	HHB-MBR155PCM	HEX HEAD BOLT, CLS 10.9, M12 X 1.75, 100 mm LG, 30 mm LG THD
59	8	FHH-MBJ075PCJ	HEX BOLT, FLANGED, CLS 8.8, M8 X 1.25, 20 mm LG, 16 mm LG THD
60	4	FHH-MBJ080FCJ	HEX BOLT, FLANGED, CLS 8.8, M8 X 1.25, 25 mm LG, FULL
61	116	FHH-MBM085FCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 30 mm LG, FULL
62	32	FHH-MBM090PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 35 mm LG, 26 mm LG THD
63	8	FHH-MBM095PCM	HEX BOLT, FLANGED, CLS 10.9, M10 X 1.5, 40 mm LG, 26 mm LG THD
64	8	FHH-MBR090PCM	HEX BOLT, FLANGED, CLS 10.9, M12 X 1.75, 35 mm LG, 30 mm LG THD
65	2	FHH-MBR135PCM	HEX BOLT, FLANGED, CLS 10.9, M12 X 1.75, 80 mm LG, 30 mm LG THD
66	4	SHC-MBM175PTA	SHCS, SST, M10 X 1.5, 120 mm LG, 32 mm LG THD
67	12	PPH-MBA075FCE	SCREW, PPH, CLS 4.8, M5 X 0.8, 20 mm LG, FULL
68	28	FTW-MBE000AJ	FLAT WASHER, M6
69	4	FTW-MBM000AJ	FLAT WASHER, M10
70	20	HLN-MBECH	LOCK NUT, CLS 8, M6 X 1
71	3	HLN-MBMCL	LOCK NUT, CLS 10, M10 X 1.5
72	2	HLN-MBRCL	LOCK NUT, CLS 10, M12 X 1.75
73	14	FLN-MBACH	LOCK NUT, FLANGED, CLS 8, M5 X 0.8
74	12	FLN-MBJCH	LOCK NUT, FLANGED, CLS 8, M8 X 1.25
75	156	FLN-MBMCL	LOCK NUT, FLANGED, CLS 10, M10 X 1.5
76	10	FLN-MBRCL	LOCK NUT, FLANGED, CLS 10, M12 X 1.75



NOTES

0010254-M-EN: Rev A



NOTES

0010254-M-EN: Rev A

This page intentionally left blank.

WOODLAND